

TOUGHLIQUID 360 ARGB Sync




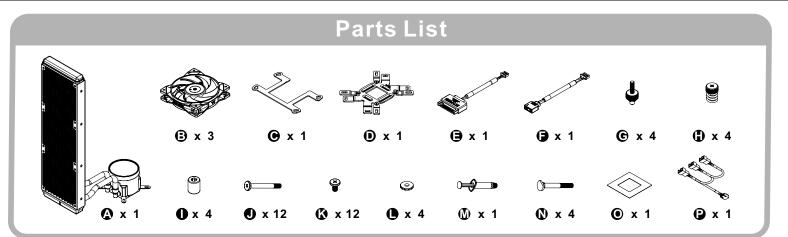


Intel Installation Guide

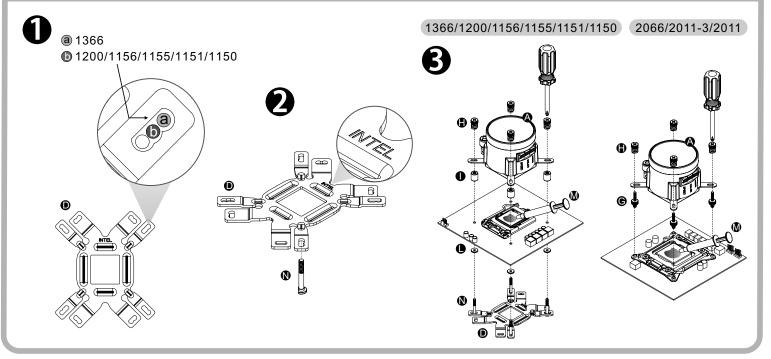

AMD Installation Guide

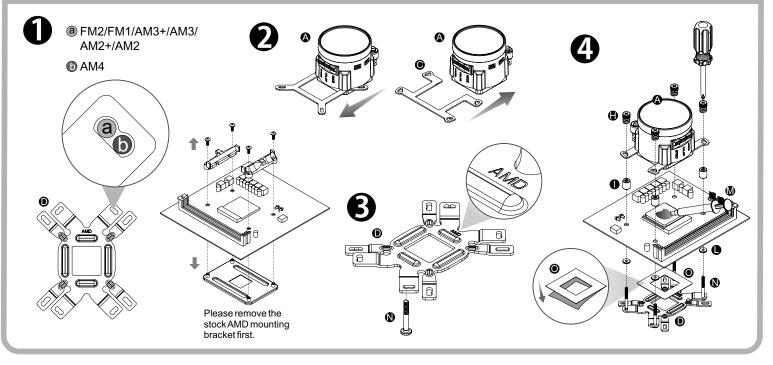

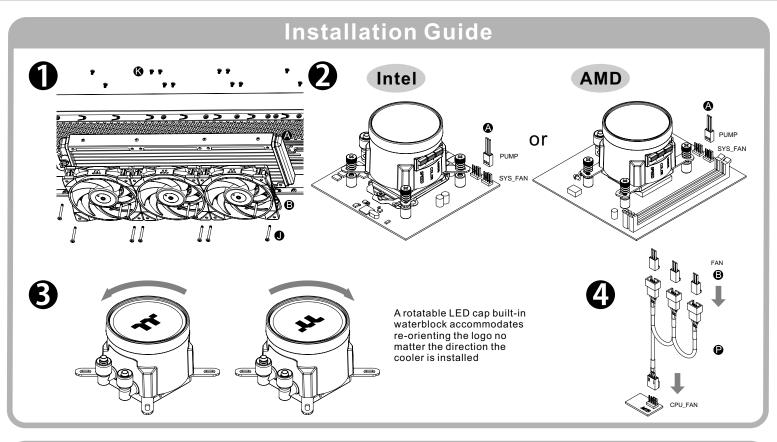


ARGB Controller Installation Guide

CAUTION

1

To use the ARGB Controller, please only connect Cable E to the water block

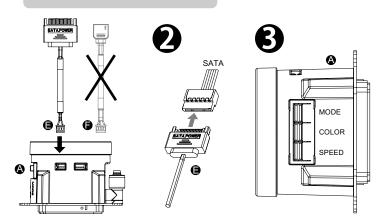

1. Light Mode:

Switch over between 7 LED modes. Rainbow \rightarrow Full light \rightarrow RGB Spectrum \rightarrow Off \rightarrow Flow \rightarrow Radar \rightarrow Pulse \rightarrow Blink

2. Color Mode: When light mode is in Full Lighted, Pulse and Blink : Switch over 8 LED colors .

 $\mathsf{Red} \to \mathsf{Yellow} \to \mathsf{Green} \to \mathsf{Teal} \to \mathsf{Blue} \to \mathsf{White} \to \mathsf{Purple} \to \mathsf{Rainbow}$

When light mode is in Ripple : Switch over 7 LED colors . Red \rightarrow Yellow \rightarrow Green \rightarrow Teal \rightarrow Blue \rightarrow White \rightarrow Purple

When light mode is in RGB Spectrum:

Click to memorize and lock the color you want, click again to unlock the 256 colors auto rotation.


When light mode is in Wave and Flow : LED color can not be adjusted.

3. Light Speed:

Switch over between 4 light modes. Slow \rightarrow Normal \rightarrow Fast \rightarrow Extreme

MB SYNC Installation Guide

- 1. To use Motherboard RGB Software, please only connect Cable F to the water block
- Please power off the PC and check the Positive and Negative ends on the connector before connecting the cable to the mainboard. Connecting the wrong end can damage the product.

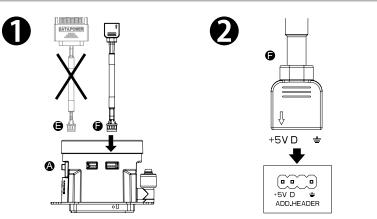



© 2021 Thermaltake Technology Co., Ltd. All Rights Reserved. www.thermaltake.com

