Dell UltraSharp 40 Curved WUHD Monitor-U4021QW Dell Display Manager User's Guide





NOTE: A NOTE indicates important information that helps you make better use of your computer.

Copyright © 2020 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

2020 - 12

Rev. A00

Contents

Overview
Using the Quick Settings Dialog
Setting Basic Display Functions
Assigning Preset Modes to Applications
Organizing Windows with Easy Arrange
Managing Multiple Video Inputs
Restoring Application Positions
Applying Energy Conservation Features
Other Shortcut Keys15
Attach DDM To Active Window (Only Window 10) 16
Troubleshooting

(D&LL

Overview

Dell Display Manager is a Microsoft Windows application used to manage a display or a group of displays. It enables manual adjustment of the displayed image, assignment of automatic settings, energy management, window organization, image rotation, and other features on selected Dell displays. After installed, Dell Display Manager runs each time the system starts and places its icon in the notification tray. Information about displays connected to the system is available when hovering over the notification-tray icon.



NOTE: Dell Display Manager uses DDC/CI channel to communicate with your display. Ensure that DDC/CI is enabled in the menu as below.

8	UltraSharp 40 Monitor	
ġ	Brightness/Contrast	
	Input Source	
	Color	
Ģ	Display	
	PIP/PBP	
Ò	USB	Off
	Audio	
	Audio	
	Menu	
	Personalize	



Using the Quick Settings Dialog

Clicking Dell Display Manager's notification tray icon to open the **Quick Settings** dialog box. When more than one supported Dell displays are connected to the computer, a specific target display can be selected using the menu. The **Quick Settings** dialog box enables convenient adjustment of the display's brightness, contrast, resolution, window layout, and so on. You can select **Manual Mode** or **Auto Mode**, and the screen resolution can be changed.

Display I	Manager	×
Display:	Dell U4021QW	
Resolution:	5120x2160	Change
Auto Mode	Standard	Configure
Manual Mode	Standard	~
Brightness:		75%
Contrast:		75%
×		
		>
	Open Dell Display Manager	

The **Guick Settings** dialog box also provides access to Dell Display Manager's advanced user interface that is used to adjust basic functions, configure auto mode and access other features.

MOTE:

Feature	Function	Description
Quick DDM Access	Quick key to call up DDM UI	 Ctrl+Shift+D Use Page Up/Page Down key or click on ">" to flip through all Easy Arrange layouts.
	Control individual display in multiple display setup	 From dropdown box to select display, selected display has Dell logo shown. Perform display self-test feature check. Move DDM UI to the display to be controlled. Press Ctrl+Shift+D to bring up the miniUI under the mouse pointer.



Setting Basic Display Functions

You can select **Manual Mode** that enables you to manually select a preset mode or select **Auto Mode** that applies a preset mode based on the active application. An onscreen message displays the current preset mode whenever it changes. The selected display's **Brightness** and **Contrast** can also be directly adjusted from the **Basic** tab.

Display	y Manager				4021Q\
Basic	Auto Mode	Easy Arrange	Input Manager	Options	
Resolution:	5120x2160			c	Change
 Auto Mode Use preset m 	node assignments for a	octive applications		Cor	nfigure
Manual Mode Choose a pre			Standar	ď	~
Brightness:	1 1 1 1		75%		
Contrast:			75%		

NOTE: When multiple Dell displays are connected, select "Enable display matrix control" to apply brightness, contrast and color presets controls to all displays.

Display	Manager			Dell U402	1QW
Basic	Auto Mode	Easy Arrange	Input Manager	Options	
Resolution:	5120x2160			Cł	nange
 Auto Mode Use preset m Manual Mode Choose a pre 		ive applications	Standard	Con	figure
Brightness:			75%		
Contrast:			75%		
	y matrix control				

DELI

Assigning Preset Modes to Applications

The **Auto Mode** tab allows you to associate a specific **Preset Mode** with a specific application, and apply it automatically. When **Auto Mode** is enabled, Dell Display Manager automatically switches to the corresponding **Preset Mode** whenever the associated application is activated. The **Preset Mode** assigned to a particular application may be the same on each connected display, or it can vary from one display to another.

Dell Display Manager is pre-configured for many popular applications. To add a new application to the assignment list, simply drag the application from the desktop, Windows Start Menu, or elsewhere, and drop it onto the current list.


NOTE: Preset Mode assignments for batch files, scripts, loaders, and nonexecutable files such as zip archives or packed files, are not supported.

You can also configure the Game preset mode to be used whenever a Direct3D application runs in full-screen mode. To prevent an application from using mode, assign a different preset mode to it.

Basic	Auto Mode	Easy Arrange	Input Man	ager	Options	
Assign a preset i	mode to a specific appl	ication. To add ar	n application, drag	it to the list:	:	
Application		Prese	t Mode			^
🔲 (Default f	or desktop apps)	Stan	dard	\sim		
🚷 (Default f	or fullscreen Direct3D)	Gam	e	\sim		
🏥 (Default f	or universal Windows a	apps) sRG	3	\sim		
🩋 360安全》	间览器	sRG	3	\sim		
<i>e</i> Internet E	xplorer	sRG	3	\sim		
📋 Microsoft	Edge	sRG	3	\sim		~


Organizing Windows with Easy Arrange

Easy Arrange helps you to effectively organize your application windows on the desktop. You first choose a pre-defined layout pattern which suits your work, then you just need to drag the application windows into the defined zones. Press ">" or use Page Up/Page Down key to find more layouts. To create a custom layout, arrange the open windows and then click **Save**.

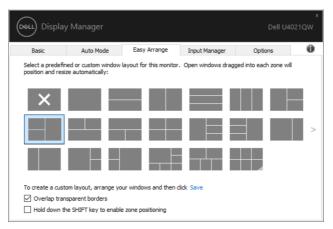


For Windows 10, you can apply different window layouts for each of the virtual desktops.

If you often use Windows snap feature, you can select "**Hold down the SHIFT key to enable zone positioning**". This gives Windows snap priority over **Easy Arrange**. You will then need to press the Shift key to use **Easy Arrange** positioning.

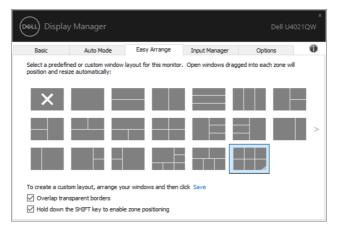

If you are using multiple displays in an array or matrix, **Easy Arrange** layout can be applied across to all the displays as one desktop. Select "**Span multiple displays**" to enable this feature. You need to align your displays properly to make it effective.

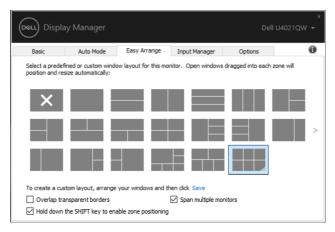

There are other advanced ways for the usage of Easy Arrange. Refer to table below.

Feature	Function	Description
Enhanced Easy Arrange	Custom layouts	 Save and name 5 customized Easy Arrange patterns. Configure x*y patterns.
	5 MRU (most- recently-used) layouts	 Press Ctrl+Shift+Home to cycle among the last 5 MRU layouts.
	On the fly parti- tion resizing	 Hold down Ctrl while resizing current Easy Arrange layout to adjust the size and numbers of cells in a layout. Newly formed Easy Arrange pattern is saved into the Easy Arrange icon position. Hold down Ctrl while clicking on a modified layout icon to restore it to default layout.
	Easy Arrange layouts for portrait mode	Portrait mode Easy Arrange icons are presented when display is rotated.

NOTE: An application may require a minimum effective resolution for its application window. Such application may not fit in an Ease Arrange zone if the zone is smaller than the required window size.

Organizing Windows with Easy Arrange 9

Managing Multiple Video Inputs

The **Input Manager** tab provides convenient ways for you to manage multiple video inputs connected to your Dell display. It makes it very easy to switch between inputs while you work with multiple computers.

All video input ports available to your display are listed. You can give each input a name as you like. Please save your changes after editing.

You can define a shortcut key to quickly switch to your favorite input and another shortcut key to quickly switch between two inputs if you often work between them.

Basic	Auto Mode	Easy Arrange	Inpu	t Mana	ger	Options	6
Input port:	Input nar	me:	USB ups	tream p	oort:		
Thunderbolt	(Click to e	edit)	O USB-E	3	© TE	π	
DP (Active)	(Click to e	edit)	O USB-E	3	OTE	л	
HDMI1	(Click to e	edit)	O USB-E	3	Оте	π	
HDMI2	(Click to e	edit)	O USB-E	3	OTE	π	
PIP/PBP	mode	KVM wizard				Save	
Favorite input sho	rtcut key:						
None	>> HDN	411	~		C	hange active input	
Input switch short	cut key:						
None	>> DP		~	<<>>	HDMI1		~

You can use the PIP/PBP mode to adjust PIP Size of Small and Large, PIP sub-window position, PBP 2 window.

	Ľ	PIP Size Small/Large
PIP	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$	PIP sub-window position, Top-Left, Top-Right, Bottom-Right, or Bottom-left.
	80%	
PBP	80%	PBP 2 window
	75%	
	75%	

Basic	Auto Mode Eas	y Arrange Input	Manager	Options	
Input port:	Input name:	USB upst	ream port:		
Thunderbolt	(Click to edit)	O USB-E) () () () () () () () () () () () () ()	зт	
DP	(Click to edit)	O USB-E		зт	
HDMI1	(Click to edit)	O USB-E	О Т	эт	
HDMI2	(Click to edit)	O USB-E	ОT	эт	
×		80% 80	1% 75%	75%	
Main window #1:	Sub wind	dow #2:	USB swi	tch shortcut ke	y:
DP	✓ Thunde	rbolt	~ None		
Sub window #3:	Sub-win	low #4:	Video s	wap shortcut ke	

In case two inputs need to swap their window positions, 'Video swap' button provides a set of defined pairs for quick selection.

Basic	Auto Mode	Easy Arrange	Input M	anager	Options	
Input port:	Input nam	ie:	USB upstre	am port:		
Thunderbolt	(Click to e	dit)	O USB-B		гвт	
DP	(Click to e	dit)	OUSB-B	0	IBT	
HDMI1	(Click to e	dit)	O USB-B	0	IBT	
HDMI2	(Click to e	dit)	OUSB-B	0	IBT	
		809	6 80%	75%	75%	
Main window #1:	S	ub window #2:		USB sv	vitch shortcut key:	
DP	\sim	Thunderbolt	```	None		
Sub window #3:	S	ub window #4:		Video :	swap shortcut key:	
505 1110011	~		\ \	None	shop shortcut key.	

You can use the dropdown list to switch to any input source.


Display	Manager					Dell U4	x 021QW
Basic	Auto Mode	Easy Arrange	Inpu	Input Manager		Options	0
Input port:	Input name:		USB ups	USB upstream port:			
Thunderbolt	(Click to edit)		O USB-E	USB-B		твт	
DP (Active)	(Click to edit)		O USB-	OUSB-B (твт	
HDMI1	(Click to edit)		OUSB-	OUSB-B		TBT	_
HDMI2	(Click to edit)		OUSB-	●USB-B		TBT	_
PIP/PB	P mode	KVM wizard				Save	
Favorite input sh	ortcut key:						
None	>> HDN	111	~			Change active input	
Input switch shor	tcut key:					Thunderbolt	
None	>> DP		~	<<>>	~	DP	\sim
						HDMI1	
						HDMI2	

NOTE: DDM communicates with your display even when the display is displaying video from another computer. You can install DDM on the computer you frequently use and control input switching from it. You may also install DDM on other computers connected to the display.



Restoring Application Positions


DDM can help you restore application windows into their positions when you reconnect your computer to the display(s). You can quickly access to this feature by right-clicking on DDM icon in the notification tray.

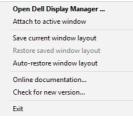

If you choose "**Auto-restore window layout**", your application windows' positions are tracked and remembered by DDM. DDM automatically puts the application windows into their original positions when you reconnect your computer to your display(s).

	Open Dell Display Manager Attach to active window				
	Save current window layout				
	Restore saved window layout				
✓	Auto-restore window layout				
	Online documentation				
	Check for new version				
	Exit				

 If you want to go back to a favorite layout after you have moved the application windows around, you can first "Save current window layout" and later "Restore saved window layout".



You may use displays with different models or resolutions in your daily routine, and you may apply different window layouts on them. DDM is able to know the display you have reconnected and restore application positions accordingly.


In case you need to replace a display in a display matrix configuration, you can save the window layout before replacement and restore the layout after a new display is installed.

NOTE: You should keep your applications running in order to benefit from this feature. DDM doesn't launch applications.



Applying Energy Conservation Features

On supported Dell models, an Options tab is available that provides PowerNap energy conservation options. You can choose to set the display's brightness to the minimum level, or to put the display to sleep when the screensaver is activated.

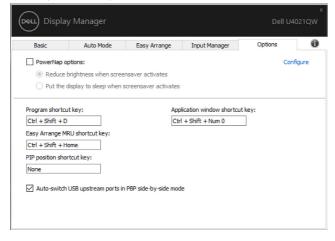

Other Shortcut Keys

Shortcut keys can be defined for below operations, you can define the shortcut keys for quick access to perform these operations:

- Program shortcut key: to quickly open the Quick Settings dialog box.
- Easy Arrange MRU shortcut key: to quickly apply the 5 recently used window layouts.
- Application window shortcut key: to launch a quick menu for options under Auto Mode and Easy Arrange.
- **PIP position shortcut key:** to quickly apply the PIP sub position of window position of Top-Left, Top-Right, Bottom-Right or Bottom-left.


DeeLL Display	y Manager			Dell U4	021QW
Basic	Auto Mode	Easy Arrange	Input Manager	Options	0
Reduce	PowerNap options: Configure Reduce brightness when screensaver activates Put the display to sleep when screensaver activates 				
Program shortcut key: Application window shortcut key: Ctrl + shift + Num 2 Ctrl + shift + Num 3 Easy Arrange MRU shortcut key: Ctrl + shift + Num 4 PIP position shortcut key: Ctrl + shift + Num 5 Ctrl + shift + Num 5 Auto-switch USB upstream ports in PBP side-by-side mode					



Attach DDM To Active Window (Only Window 10)

DDM icon can be attached to the active window you are working on. Click on the icon for easy access to below features.

Feature	Function	Description
Attach DDM to Active Window (only Window	Change preset or snap to different partitions	 DDM icon attached to active window and user can easily switch windowposition, change color preset mode, and associate auto preset mode.
10)	Shortcut key trigger	On a running app window, press Ctrl+Shift+Ins also trig- gers the attached DDM menu.
	Move app window among Easy Ar- range cells	 Send the app window to previous/next Easy Arrange cell.
	Move app window among displays	\prime \cdot Send the app window to previous/next display.

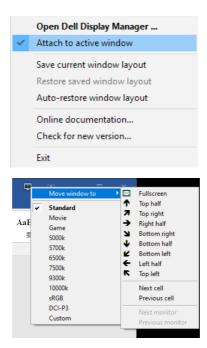




DELL

Troubleshooting

If DDM does not work with your display, DDM will show below icon in your notification tray.

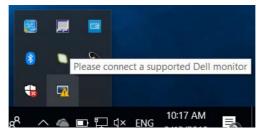

Click on the icon, DDM shows a more detailed error message.



Please note that DDM only works with Dell branded displays. If you are using displays from other manufacturers, DDM doesn't support them.

If DDM is unable to detect and/or communicate with a supported Dell display, please take below actions to troubleshoot:

- 1. Make sure the video cable is properly connected to your display and your computer. especially the connectors should be firmly inserted into position.
- **2.** Check the display OSD to ensure DDC/Cl is enabled.
- **3.** Make sure you have the correct and latest display driver from the graphics vendor (Intel, AMD, NVidia, etc.). Display driver is often the cause of DDM failure.
- **4.** Remove any docking stations or cable extenders or converters between the display and the graphics port. Some low-cost extenders, hubs or converters may not support DDC/CI properly and can fail DDM. Update the driver of such device if the latest version is available.
- 5. Restart your computer.

DDM may not work with below displays:

- Dell display models earlier than year 2013 and D-series of Dell displays. For more information see www.dell.com/support/monitors.
- Gaming displays using Nvidia-based G-sync technology
- · Virtual and wireless displays do not support DDC/CI
- Some early models of DP 1.2 displays, it may be necessary to disable MST/DP 1.2 using the display OSD

If your PC is connected to the Internet, you will be prompted to upgrade to a newer version of DDM when it is available. It is recommended to download and install the latest DDM application.

You may also check for new version by right clicking on DDM icon while pressing and holding 'shift' key.

	Open Dell Display Manager
	Refresh
	Save monitor asset report
	Save diagnostic report
	Save current window layout
	Restore saved window layout
	Auto-restore window layout
~	Auto-load at startup
~	Onscreen notifications
	Check for new version
	Exit

Døll