



# Einhell

# EXPERT

## POWER X-CHANGE

Cordless Chain Saw

**FORTEXXA 18/30**

**Item No.: 4600010**

Ident No.: 21010

Bar Code: 4006825656572

The Einhell FORTEXXA 18/30 cordless chainsaw is a member of the Power X-Change family. The chain saw is driven by a brushless electric motor, is equipped with an OREGON quality blade and chain and has a tool-free adjustable chain tension/change. The chain catcher and the kickback protection with instant chain brake ensure safety and the automatic chain lubrication via the large oil filling opening for care. The claw stop is made of metal, the ergonomic handle is equipped with softgrip. The chain speed is adjustable, it can be switched between full power and Eco mode. Delivery does not include battery or charger.

## Features & Benefits

- Member of the Power X-Change family, 1x18V batteries necessary
- Einhell Brushless Motor
- High-quality chain and bar from OREGON
- Speed setting depending on the application
- Selection of HIGH power (8.9 m/s) and ECO power (6 m/s)
- Kickback protection with instant chain brake
- Toolless chain tensioning and changing
- Ergonomic handle with Softgrip
- Sturdy stop claws made of metal
- Big filler opening
- Automatic chain greasing
- Chain catcher
- Recommendation for optimum results: 4.0 Ah rechargeable battery
- Supplied without battery and charger (available separately)

 
 


## Technical Data

- Sword length 300 mm
- Max. cutting length 27 cm
- Chain cutting speed 8.9 m/s
- Oil tank capacity 160 mL

## Logistic Data

- Product weight (kg) 4.1 kg
- Gross weight (kg) 5 kg
- Dimensions single packaging 257 x 481 x 282 mm
- Pieces per export carton 4 Pieces
- Gross weight export carton 20 kg
- Dimensions Export Carton 614 x 487 x 475 mm
- Container quantity (20"/40"/40"HC) 656 | 1376 | 1720

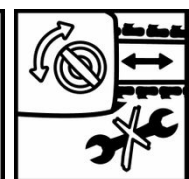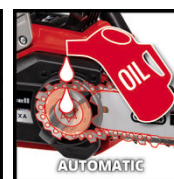

## Available as special accessories



Power X-Boostcharger 6A  
Charger  
Item No.: 4512064  
Bar Code: 4006825629019  
Einhell Accessory



2x 3,0Ah & Twincharger Kit  
PXC-Starter-Kit  
Item No.: 4512083  
Bar Code: 4006825638509  
Einhell Accessory



18V 4-6Ah Multi-Ah PXC Plus  
Battery  
Item No.: 4511502  
Bar Code: 4006825644210  
Einhell Accessory



18V 2,5Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512097  
Bar Code: 4006825646962  
Einhell Accessory



18V 2,0Ah Power X-Change  
Battery  
Item No.: 4511395  
Bar Code: 4006825610369  
Einhell Accessory



2x2 Power X-Quattrocharger 4A  
Charger  
Item No.: 4512102  
Bar Code: 4006825649536  
Einhell Accessory



18V 2,5Ah Power X-Change  
Battery  
Item No.: 4511516  
Bar Code: 4006825650518  
Einhell Accessory



Power X-Fastcharger 4A  
Charger  
Item No.: 4512103  
Bar Code: 4006825650228  
Einhell Accessory



18V 5,2Ah Power X-Change Plus  
Battery  
Item No.: 4511437  
Bar Code: 4006825616606  
Einhell Accessory



Power X-Twincharger 3A  
Charger  
Item No.: 4512069  
Bar Code: 4006825629729  
Einhell Accessory



Power X-Car Charger 3A  
Charger  
Item No.: 4512113  
Bar Code: 4006825655377  
Einhell Accessory



2x 18V 2,5Ah PXC-Twinpack CB  
Battery  
Item No.: 4511524  
Bar Code: 4006825656206  
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB 2  
Battery  
Item No.: 4511489  
Bar Code: 4006825638578  
Einhell Accessory



18V 4,0Ah PXC Starter Kit 2  
PXC-Starter-Kit  
Item No.: 4512042  
Bar Code: 4006825613704  
Einhell Accessory



18V 2,0Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512040  
Bar Code: 4006825613681  
Einhell Accessory



Ersatzschwert 30cm 1,1  
Chain Saw Accessory  
Item No.: 4500191  
Bar Code: 4006825663518  
Einhell Accessory



Ersatzkette 30cm 1,1 45T 3/8  
Chain Saw Accessory  
Item No.: 4500192  
Bar Code: 4006825663532  
Einhell Accessory



18V 3,0Ah Power X-Change Plus  
Battery  
Item No.: 4511501  
Bar Code: 4006825644197  
Einhell Accessory





18V 4,0Ah Power X-Change 2  
Battery  
Item No.: 4511396  
Bar Code: 4006825610376  
Einhell Accessory



18V 3,0 Ah Power-X-Change 2  
Battery  
Item No.: 4511341  
Bar Code: 4006825590593  
Einhell Accessory

# Battery-Running-Times

One Battery for All		
	sawing <sup>1</sup> (pieces)	sawing <sup>2</sup> (pieces)
1.5 Ah	53	59
2.0 Ah	70	78
2.5 Ah	88	98
3.0 Ah	105	117
4.0 Ah	140	156
5.2 Ah	182	203
6.0 Ah	210	234

For best performance select a battery with at least 4.0 Ah

**Test setup:**

- 1) scantling 70x70 mm - BOOST
- 2) scantling 70x70 mm - ECO