



TT RGB Plus Software control interface


Please download TT RGB PLUS from Thermaltake's Official website.

<https://www.thermaltake.com/downloads>

OS compatibility: Windows 10, Windows 11


SWAFAN RGB Radiator Fan Software User Interface

CONNECT - CONTROLLER

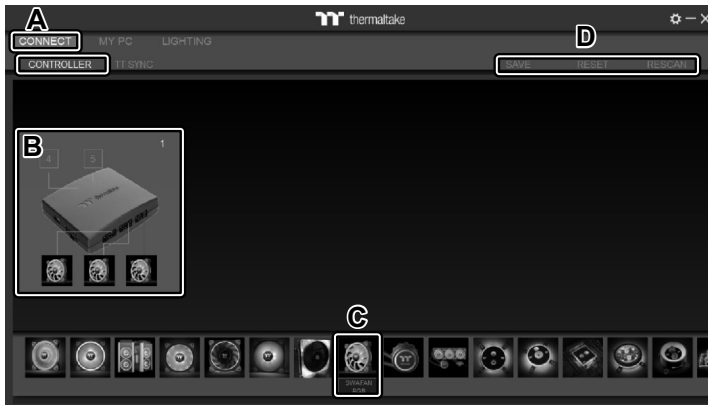

- A. After installation of TT RGB PLUS, you can find controllers on the "CONNECT" & "CONTROLLER" page.
- B. Click the controller port to make the "SWAFAN RGB" fan glow red lighting to pair.
- C. Drag and drop to pair the "SWAFAN RGB" fan with controller port.
- D. SAVE: Save the controller pairing settings.
RESET: Reset the controller pairing.
RESCAN: Rescan the controllers.


MY PC - FAN SPEED

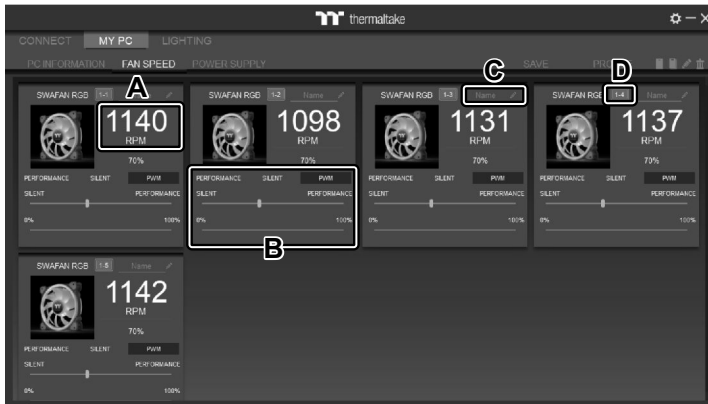

SWAFAN RGB Radiator Fan Speed Information and PWM Performance Settings.

- A. SWAFAN RGB real-time fan speed.
- B. Fan speed settings
 - PERFORMANCE: 0% → 100% (1500rpm)
 - SILENT: 0% (300~500rpm)
 - PWM: Set PWM silent (50%) to PWM performance (100%).
- C. NAME: Edit the case fan name.
- D. Controller – Port number.

LIGHTING

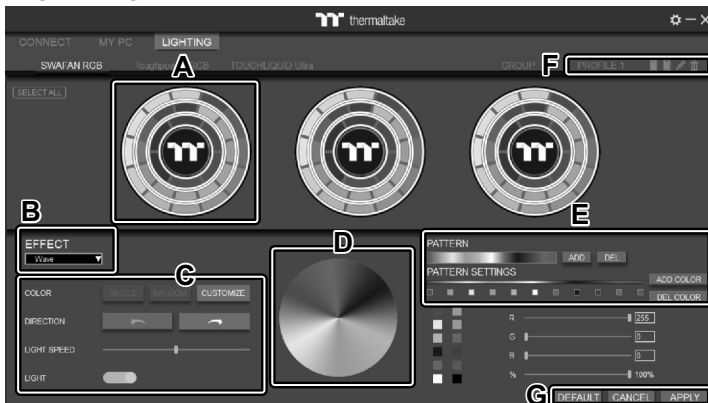

- A. Preview and edit the lighting effect.
 - B. Select 23 Lighting Effects.
 - C. Lighting effect settings.
 - D. Color palette: select lighting color
 - E. PATTERN: Set up the color pattern ring.
 - F. Profile Settings: New, Copy, Edit, Delete
 - G. DEFAULT: Reset the lighting effects.
- CANCEL: Deselect the LEDs for the preview screen.
APPLY: Execute and store lighting effects.



The software interface may vary with feature updates, please download the latest software version from www.thermaltake.com