

**GO**  **TREME**<sup>®</sup>  
PIONEER

### **i** IMPORTANT INFORMATION

To ensure the optimal functioning of your camera, please note the following important information:

#### **MicroSD card:**

- Please ensure your memory card is formatted in the camera before first using the card for the first time [Settings > Format].
- The maximum capacity memory card supported is 32GB.

Use of memory cards exceeding the maximum recommended capacity may result in file errors.

- For best results, we recommend using high quality Micro SD cards Class 10 with U3 High Speed or higher.


Ensure a U3 rated memory card is used when recording 4K video.

Using a lower rated card may present data transfer speed issues due to the large file size a 4K video produces.

- The recording time depends on the selected resolution.
- After reaching a max. video recording time of approx. 29 minutes, the camera will stop recording automatically. A new recording must be restarted manually.

#### **Charging:**

- Ensure the camera is charged completely before first use.
- Keep the device away from children while charging.
- Ensure the camera is switched off when charging. If the camera turns on automatically when connected to a power source please turn it off to complete charging. A camera plugged into power and switched on will not charge.
- The camera should only be charged via the USB port of a computer or a USB power adapter with a maximum capacity of 1000mAh.
- Unplug the USB cable connected to the camera before using the camera.
- The battery life is - depending on the settings and outside temperature - up to 90 minutes under optimal conditions.

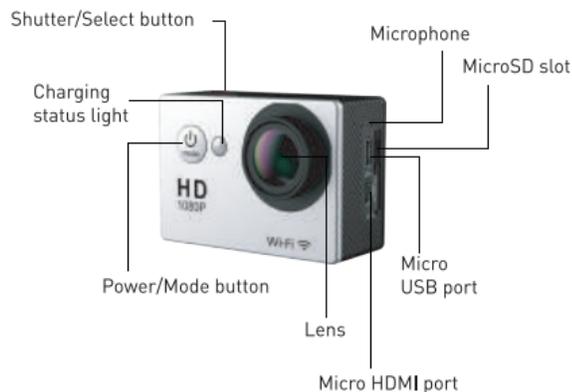




## WATERPROOF HOUSING



## MOUNTING YOUR CAMERA

Attach your camera to helmets, gear and equipment.



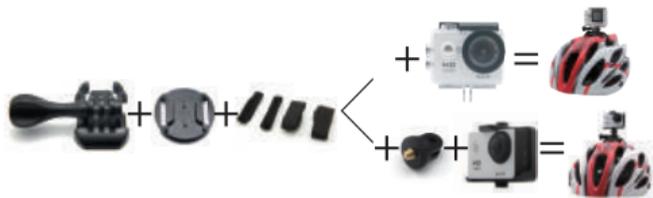

---

## GETTING STARTED

---

To power ON:  
Press the **Power/Mode Button**.


To power OFF:  
Press and hold the **Power/Mode Button**.

---

## OVERVIEW

---

Turn the camera ON and repeatedly press the **Power/Mode Button** to cycle through camera modes and settings. The modes will appear in following order:

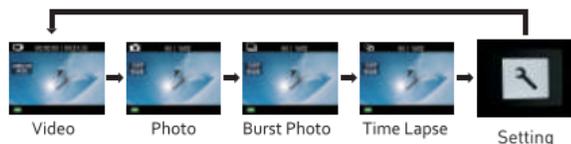

	<b>Video</b>	Record Video
	<b>Photo</b>	Capture a single photo
	<b>Burst Photo</b>	Capture photo bursts
	<b>Time Lapse</b>	Shoot a series of photos at set time intervals
	<b>Video &amp; Photo Playback</b>	
	<b>Adjust camera settings, resolution and more</b>	



Press the **Shutter/Select Button** to enter the settings menu. Repeatedly press the **Power/Mode Button** to cycle through options and press the **Shutter/Select Button** to select desired option. Or use the **Up/Playback** or **Down/Wi-Fi Button** to cycle through the various options.

Time Stamp: Off/Date/Date & Time  
 Exposure: +-2.0/+-1.7/+-1.3/+-1.0/+-0.7/+-0.3/0  
 Photo Resolution: 12M, 8M, 5M, 2M  
 Burst Photo: 3 Photos  
**Photo timer/Time lapse:**  
 2s/3s/5s/10s/20s/30s/60s  
 Continuous shot: Off/On  
 Power Frequency: 50Hz/60Hz/Auto  
 Language: English/Traditional Chinese/Italian/  
 Spanish/Portuguese/German/Dutch/France/Czech/  
 Polish/Turkish/Russian/Japanese/Korean/Thai  
 Date & Time: MM/DD/YY, DD/MM/YY, or YY/MM/DD  
 Sound Indicator: Shutter On/Off, Start Up 1/2/3/  
 None, Beep On/Off, Volume 0/1/2/3  
 Rotate Display: On/Off (For use when camera is  
 mounted upside down)

Screen Saver: Off/1 min/3 min/5 min  
Power Saver: Off/1 min/3 min/5 min  
Format: No/Yes  
Reset: No/Yes  
Version: Displays current firmware version

---

## VIDEO MODE

---

### Video

To record Video, verify the camera is in Video mode. If the Video icon on your camera's LCD screen is not showing, press the Power/Mode Button repeatedly until it appears.

#### **To start recording:**

Press the Shutter/Select Button. The camera will emit one beep and the Camera Status Lights will flash while recording.

#### **To stop recording:**

Press the Shutter/Select Button. The Camera Status Lights stop flashing and the camera emits one beep to indicate recording has stopped.

This camera automatically stops recording when the battery is out of power. Your Video will be saved before the camera powers OFF.

**Recording times are dependant on resolution and frame rate settings.**

**After reaching a max. video recording time (or file size\*) the camera will automatically stop. It can only be restarted manually.**

**\*FAT32 file system has a maximum single file size limit of 4GB: 1080p/30fps: 29min. max.**

---

## PHOTO MODE

---

### Photo

To capture a Photo, verify the camera is in Photo mode. If the Photo icon on your camera's LCD screen is not showing, press the Power/Mode Button repeatedly until it appears.

#### **To take a photo:**

Press the Shutter/Select Button. The camera will emit the camera shutter sound.

---

## BURST PHOTO MODE

---

### Burst Photo

To capture a Burst Photo series, verify the camera is in Burst Photo mode. If the Burst Photo icon on your camera's LCD screen is not showing, press the Power/Mode Button repeatedly until it appears. In Burst Photo mode, your camera takes 3 photos in 1.5 seconds.

To take a Burst Photo series:

Press the Shutter/Select Button. The camera will emit camera shutter sounds.

---

## TIME LAPSE MODE

---

### Time Lapse

To capture a Time Lapse series, verify the Continuous shot is ON and camera is in Time Lapse mode. If the Time Lapse icon on your camera's LCD screen is not showing, press the Power/Mode Button repeatedly until it appears. In Time Lapse mode, your camera captures a series of photos at 2, 3, 5, 10, 20, 30 or 60 second intervals.

The intervals at which the camera will operate in Time Lapse mode must first be set using the settings screen before recording in Time Lapse mode.

#### **To take Time Lapse:**

Press the Shutter/Select Button. The camera initiates countdown and emits the camera shutter sound each time a Photo is taken.

---

## PLAYBACK

---

### **Playing Back Videos and Photo**

To enter the Playback menu:

1. Verify the camera is in Camera mode.
2. Press the Up/Playback Button to enter the Playback menu.
3. Repeatedly press the Power/Mode Button to cycle through Video and Photo.
4. Press the Shutter/Select Button to select desired option.
5. Use Up/Playback Button or Down/Wi-Fi Button to cycle through the various options.
6. Press the Shutter/Select Button.
7. To return to the Playback menu, press the Power/Mode Button.
8. To exit, hold down the Up/Playback Button for two seconds.

---

## STORAGE/MICRO SD CARDS

---

This camera is compatible with 16GB and 32GB capacity microSD, microSDHC, and microSDXC

memory cards. You must use a microSD card with at least a Class 10 speed rating. We recommend using brand name memory cards for maximum reliability in high-vibration activities.

---

## BATTERY

---

### Charging The Battery

1. Connect the camera to a computer or USB power supply.
  2. The Charging Status Light remains ON while the battery is charging.
  3. The Charging Status Light will turn OFF when the battery is fully charged.
- Charging Time: 5 hours

---

## COMPATIBILITY

---

Compatibility varies by device. Content playback, sharing and access to the camera's memory card might be not available on some devices.

---

## CAMERA APP

---

### Connecting to the iSmart DV App

The **iSmart DV App** lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, photo playback and sharing of select content and more.

1. Download the iSmart DV App to your smartphone or tablet at the Google Play or Apple App Store.
2. Press the Power/Mode Button to power camera ON.
3. Make sure the camera is in Camera mode.
4. Press the Down/Wi-Fi Button to turn on Wi-Fi\*.
5. In your smartphone or tablet's Wi-Fi settings, connect to the network called "Pioneer" followed by a series of numbers.
6. Enter the password "1234567890".
7. Open the iSmart DV App on your smartphone or tablet.

\* Press and hold the Down/Wi-Fi Button for three seconds to turn OFF Wi-Fi.

The **iSmart DV App** is compatible with smartphones and tablets listed below:

### For Apple iOS

\* iPhone5, 5s, 6 (Plus), & 6s, 7 (iOS9 & iOS10)

\* iPad Air & Mini (iOS9)

### For Android

\* Android 4X Quad-Core Geräte (up to Android 7.0)



iSmart DV



## SAFETY INSTRUCTIONS

**⚠ WARNING:** The camera is not suitable for children under 36 months because of choking hazard.

**⚠ WARNING:** Always protect your camera from falls, blows and bumps.

- Keep a sufficient distance from objects that generate strong magnetic fields or radio waves, such as electrical appliances to prevent them from damaging the product or affecting the sound and image quality.
- Store the device cool (at room temperature) in a dry and dust-free location and never expose the product to high temperatures or permanently direct sunlight.
- In the unlikely event of overheating, smokes or unpleasant odors coming out of the unit, disconnect it immediately from the charging cable and remove the battery to avoid a fire.

**⚠ WARNING:** Before using the camera in the water, make sure that all lids and closures on the camera and underwater housing are closed and sealed.

- After using it in salty or chlorinated water, clean the case and let it dry.
- The camera should not be exposed to high temperature and humidity differences to prevent condensation inside the case or behind the lens.
- After under water use, the housing must be left open to avoid condensation or rusting.



All product specifications are correct at time of print and are subject to change without prior notice.

EasyPix GmbH reserve the right for errors or omissions.

For technical help please visit our support area on [www.easypix.eu](http://www.easypix.eu).

#### CONFORMITY

The manufacturer hereby declares that the CE marking was applied to the product GoXtreme Pioneer in accordance with the basic requirements and other relevant provisions of the following CE Directives:

2014/53/EU

2011/65/EC RoHS

2014/30/EU EMV

2012/19/EC WEEE



The EC Declaration of Conformity can be downloaded here:

[http://www.easypix.info/download/pdf/doc\\_goxtreme\\_pioneer.pdf](http://www.easypix.info/download/pdf/doc_goxtreme_pioneer.pdf)

#### DISPOSAL



Dispose of packaging

For disposal, separate packaging into different types. Cardboard and board must be disposed of as paper and foil must be recycled.



Disposal of Waste Electrical and Electronic Equipment and/or Battery by users in private households in the European Union. This symbol on the product or on the packaging indicates that this cannot be disposed of as a household waste. You must dispose of your waste equipment and/or battery by handling it over to the applicable take-back scheme for the recycling of electrical and electronic equipment and/or battery. For more information about recycling of this equipment and/or battery, please contact your city office, the shop where you purchased the equipment or your household waste disposal service. The recycling of materials will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and environment.



Battery warning

- Never dismantle, crush, or pierce the battery, or allow the battery to short-circuit. Do not expose battery being placed in high temperature environment, if battery leaks or bulges, stop continue to use.
- Always charge using the charger. Risk of explosion if battery is replaced by an incorrect type.
- Keep the battery out of reach of children.
- Batteries may explode if exposed to naked fire. Never dispose of batteries in a fire.
- Disposed of used batteries observing local regulations.
- Before disposing the device, please remove the battery.



The camera is not suitable for children under 3 years because of choking hazard.



Made in China / Only for EU

**easypix**<sup>®</sup>  
LIFESTYLE ELECTRONICS