

DIGITAL RADIO DAB/FM

Operating Instructions GB Mode d'emploi FR




©2017 Sony Corporation Printed in China

http://www.sony.eu/


XDR-S41D

Getting Started

1 Connect the AC adaptor or insert four batteries. Then, extend the antenna.

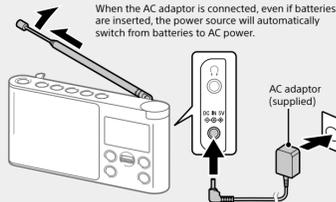


To use the unit on batteries

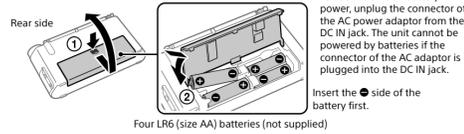


Four LR6 (size AA) batteries (not supplied) Tips: The backlight will turn off if no operation is performed for about 30 seconds...

2 Turn on the radio.

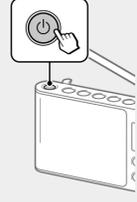

When turning on the radio for the first time

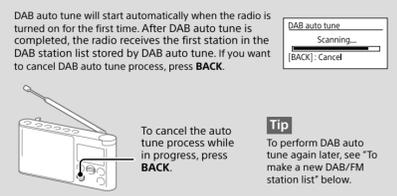


TIP

To perform DAB auto tune again later, see 'To make a new DAB/FM station list' below.

Listening to the Radio

See "Setup menu options" for manual tuning.

1 Turn on the radio, and then select the DAB or FM function.

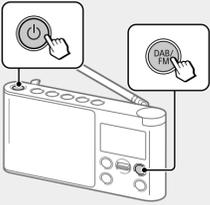



When selecting the FM function for the first time



Tips: Even if you select "Later" on the "Get FM station name" screen, FM station names will be received and stored in the unit while you are listening to broadcasts.

2 Select the desired station or service.

Slide the jog lever up or down to make a selection.

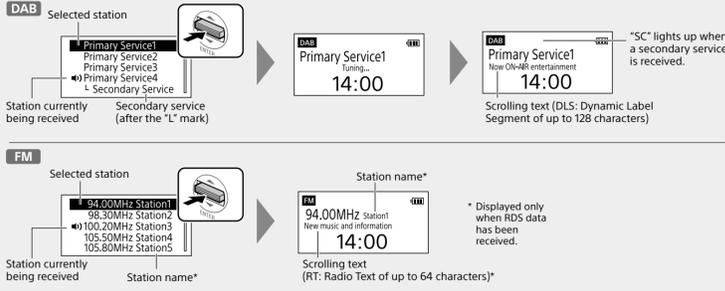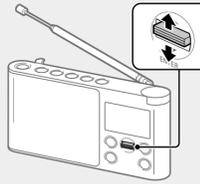

About the FM auto tune process

You can cancel the FM auto tune process that starts after the FM function is selected for the first time.




Assigning Stations to the Preset Buttons

Assign your favourite stations to the 5 preset buttons. You can assign up to 5 stations each for DAB and FM functions.

1 Tune to the station you want to preset.



2 Press and hold the desired preset button (1 - 5) until "Station saved to preset x." appears on the display.

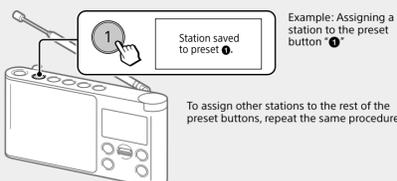


To change button assignment

1 Tune to a new station. 2 Press and hold the preset button you want to change until "Station saved to preset x." appears on the display.


Tip: The button assignment information remains in the radio's memory even after DAB and FM auto tunes are performed.

Listening to an Assigned Station

Press the desired preset button (1 - 5).

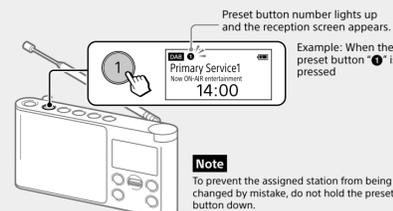


To improve DAB/FM radio reception

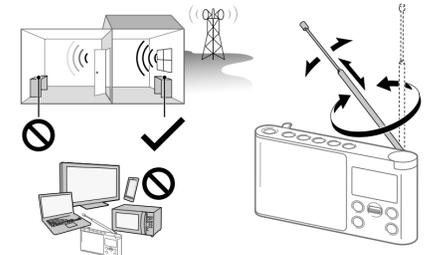

Note: When adjusting the antenna, be sure to hold it by the bottom part. The antenna may be damaged if you move it with excessive force while holding it by the upper part.

To make a new DAB/FM station list

If you have moved to another region, perform DAB and FM auto tunes again. Select the DAB or FM function, then press AUTO TUNE.

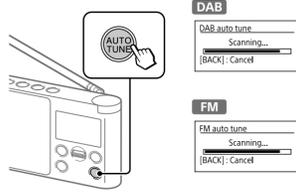


Notes: The currently stored station list will be cleared once the auto tune process starts.

Note on FM auto tuning: Be sure to select "By station list" in "FM tune mode" before starting FM auto tune.

To search FM stations (scan tuning)


You can search receivable FM stations in 0.05 MHz steps. Select the FM function, then press AUTO TUNE.

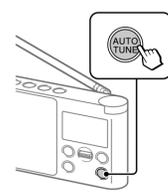

If a receivable station is found, "ENTER>Select" appears on the display. Press the jog lever to receive the station.

Tips: You can also search FM stations by sliding and holding the jog lever up or down after selecting the FM function.

Guide to parts and controls

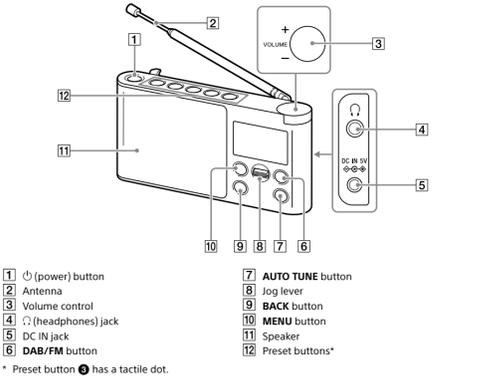

Battery indicator: Battery indicator lights up when using the unit on batteries. The remaining battery power is displayed in 5 levels.

Sleep

The radio automatically turns off after a set time has elapsed. Select the desired timer setting (minutes) from the following: Off (deactivated)/15 min./30 min./45 min./60 min.

Information DAB

Displays information for the station to which you are listening. Channel: Channel and frequency. Multiplex name: Ensemble label.

Service name: Station name. PTY: PTY label. Bit rate: Bit rate. Signal level: Displays the signal level for the DAB station.

FM tune mode FM

Select the tuning mode for FM. By station list: You can select the desired station from the list of FM stations stored by auto tune.


Edit FM station list FM

You can edit the FM station list. Get FM station name: Perform this operation when you want to receive RDS information.

Listening through headphones

Connect headphones that have a stereo or monoaural mini plug. Maintaining the moderate volume level: The radio limits the maximum volume to allow you to listen to the sound at a moderate volume level.

Note: When connecting headphones to the unit, use headphones with a stereo (3-pole) or monoaural (2-pole) mini plug.

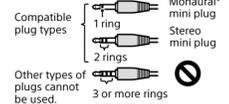

When listening to stereo sound using monoaural headphones, you will hear sound from the left channel only.

About RDS Features

What is RDS?

Introduced by the European Broadcasting Union (EBU) in 1987, the Radio Data System (RDS) allows information such as station names to be received via the 57 kHz sub-carrier signal of FM broadcasts.

Using the RDS functions

Table with 2 columns: RDS function and Description. Includes Station name display, RT (radio text), and DAB/FM auto tune.

Precautions


- Operate the unit only on the power sources specified in "Specifications." Do not mix an old battery with a new one or mix different types of batteries.

Troubleshooting

Should any problem persist after you have made the following checks, consult your nearest Sony dealer.

- Display is dim, or no indication is displayed. The radio is being used in extremely high or low temperatures or in a place with excessive moisture.

The battery compartment lid has come off.

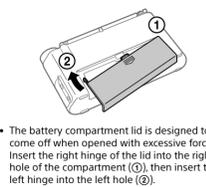

If maintenance service is performed: All user-configured settings, such as preset radio stations, the timer settings, and the clock, may be initialized.

Messages

- Low Battery (flashes, and the power is turned off): The batteries are exhausted. Replace all the batteries with new ones.

Specifications

Frequency range: DAB (Band-III) 174.928 MHz - 239.200 MHz. FM: 87.5 MHz - 108 MHz. Intermediate frequency: DAB (Band-III) 2.048 MHz. DAB (Band-III) frequency table (MHz) table.

Supplied accessories:

Table listing accessories like AC adaptor, batteries, and a list of program types with their corresponding display icons.

