

## WARRANTY

### Limited Warranty

Jackery Inc. warrants to the original consumer purchaser that the Jackery product will be free from defects in workmanship and material under normal consumer use during the applicable warranty period identified in the 'Warranty Period' section below, subject to the exclusions set forth below. This warranty statement sets forth Jackery's total and exclusive warranty obligation. We will not assume, nor authorize any person to assume for us, any other liability in connection with the sale of our products.

### Warranty Period

The warranty period is 24 months. In each case, the warranty period is measured starting on the date of purchase by the original consumer purchaser. The sales receipt from the first consumer purchase, or other reasonable documentary proof, is required in order to establish the start date of the warranty period.

### Remedy

Jackery will repair or replace (at Jackery's option) any Jackery product that fails to operate during the applicable warranty period due to defect in workmanship or material. If a valid claim is made during the applicable period, Jackery, at its option, will either (1) replace the product, or (2) exchange the product with a product that is of equal value. A replacement product assumes the remaining warranty of the original product or ninety (90) days from the date of replacement, whichever is greater. Customer is responsible for the return shipping costs.

### Limited to Original Consumer Buyer

The warranty on Jackery's product is limited to the original consumer purchaser and to any subsequent owner.

### Exclusions

Jackery's warranty does not apply to (i) any product that is misused, abused, modified, damaged by accident, or used for anything other than normal consumer use as authorized in Jackery's current product literature, or (ii) any product purchased through an online auction house. Jackery's warranty does not apply to the battery cell unless the battery cell is fully charged by you within seven days after you purchase the product and at least every 3 months thereafter.

### How to Receive Service

To obtain warranty service, contact our customer service team at [hello@jackery.com](mailto:hello@jackery.com)

## SPECIFICATIONS

Capacity	Weight	Dimensions	Input	DC Output	AC Output	USB Output
240Wh (16.8Ah, 14.4V)	3 kg / 6.6 lbs	231mm x 199mm x 132mm 9.0" x 7.8" x 5.2"	8mm 12V~30V 42W Max	DC 13.3V 10A	110V 60Hz 200W	2 @ 5V 2.4A

Battery	Lifecycles	Operating Temperature	Recharging Temperature	Management System	Warranty	Certifications	Technical Support
Lithium-ion	≥500	-10 to 40 °C	0 to 40 °C	Temperature control, Surge protection, Short circuit protection	24 Months	FCC, RoHS, UN38.3	Lifetime


## WHAT'S IN THE BOX



Jackery Explorer 240



Car Charger Cable

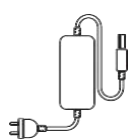

AC & AC Cable (2 Parts)



User Manual

## FAQs

### What type of battery is in an Explorer 240?

Explorer 240 contains a battery pack which consists of an array of cylindrical 18650 lithium battery cells with high energy density.

### How do I know if my Explorer 240 is charged?

To check the charge level of the Explorer 240, refer to the LCD Battery Display.

### Can I charge the Explorer 240 while supplying power at the same time?

The Explorer 240 supports pass through charging. It will charge connected devices, while also being charged.

### How do I know if my device will work with the Explorer 240?

You will need to check the amount of power your device requires. This may require some research on your end. An online search or examining the user guide for your device should suffice. To be compatible with the Explorer 240 you should use devices that require less than 200 W.

## CONTACT US



[www.jackery.com](http://www.jackery.com)



[hello@jackery.com](mailto:hello@jackery.com)



888-502-2236  
Mon-Fri 9:00 - 6:00 PST (USA)



[@jackery.inc](https://www.facebook.com/jackery.inc)



[@jackeryinc](https://twitter.com/jackeryinc)




[@jackeryusa](https://www.instagram.com/jackeryusa)

# Jackery Explorer 240

## USER MANUAL

FEATURES • TECHNICAL SPECIFICATIONS • HOW TO CHARGE • FAQs • WHAT'S IN THE BOX

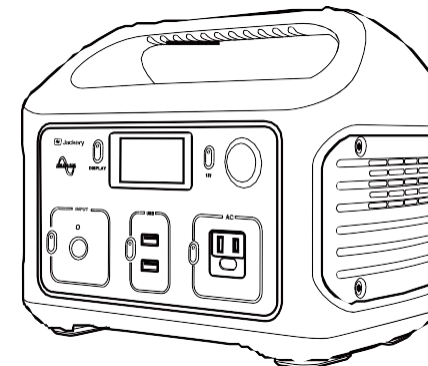

Congratulations on your new Jackery Explorer 240!



**CHARGE FIRST!** Before reading through the manual, you can begin to charge up you Explorer 240 by connecting it to the power supply provided and plugging into a wall socket.



## POWER

### LCD Screen Switch

Press the power button to start/stop charging.

Turn off each output by pressing its power button for about 2 seconds, as it does not turn off automatically.

## LCD SCREEN




**Power Level Percentage**  
Check the battery level by pressing the display button before use. If battery is at a low level, charge first.

### INPUT OUTPUT

**Power of Input & Output (W)**  
If the Jackery Explorer's total output exceeds 200W, it will automatically shut off. Please ensure the power consumption is less than 200W, then press the power button.



**Low & High Temperature Alarm**  
The Explorer 240 can power your devices at temperatures ranging from 0 - 40°C (32 - 104 °F). If your working temperature is outside this range, the Explorer 240 may stop working.

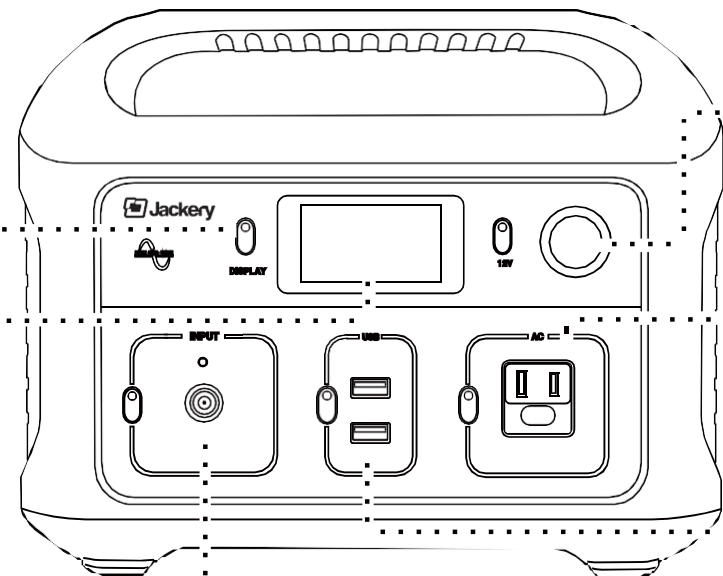




## DC INPUT

For Solar Panel (optional)

## CHARGING

Here are some common devices and their power requirements for each charging port.

**12V Car Port**  
 Mini Fridge (60 W) Powers for 5 Hours  
 LED Light (5 W) Powers for 40 Hours  
 Drone 2~4 Recharges




**AC Output**  
 Laptop (50 W) 4 Recharges  
 32" TV (60 W) Powers for 3+ Hours  
 Drone 2~4 Recharges

**USB Output**  
 Phone (12W) 20 Recharges  
 GoPro 40+ Recharges

If the Jackery Explorer's total output exceeds 200W, it will automatically shut off. Please ensure the power consumption is less than 200W, then press the power button.

## RECHARGING

Before use or storage, plug your Explorer 240 into the wall until it is fully charged. If the display shows less than 20% capacity, plug it into a power source, like an AC outlet or a solar panel, as soon as possible. There are many ways to recharge your Jackery Explorer:

 Car Charger About 7 Hours  
 Wall Charger About 7 Hours  
 Solar Panels (Optional) About 10 Hours (Depending on Weather)

## SAFETY INSTRUCTIONS

Observe these instructions to ensure safe usage. Explanation of symbols:



**DANGER**  
Noncompliance may very likely lead to serious injury\*\* or death

- DO NOT disassemble, repair or modify the unit or the battery.
- DO NOT place the unit close to or in a fire or expose it to heat. Keep out of direct sunlight.
- DO NOT charge, use or store the unit in a bathroom or in an area exposed to rain or moisture.
- Only use the output socket to power external devices. Never connect the output to mains power under any circumstances.

- DO NOT touch the unit or the plug-in points if your hands are wet.
- DO NOT connect any metallic objects to the AC input or output.
- DO NOT rub your eyes if fluid from inside the unit should get in your eyes.

- DO NOT dispose the unit together with household waste.
- DO NOT use any inappropriate power cords.
- DO NOT operate the unit above the specified input voltage.
- DO NOT use the unit if it is not functioning correctly.
- DO NOT move the unit if it is recharging or in use.

\* Serious injuries include blindness, burns, electric shock, fractures, poisoning, etc., which can lead to complications, hospitalization or permanent treatment.

\*\* Injuries include burns, electric shock, etc., which do not lead to hospitalization or permanent treatment.

\*\*\* Property damage: includes buildings, belongings and pets, etc.



**WARNING**  
Noncompliance may lead to serious injury\*\* or death

- Use and store the unit only in a clean and dry environment. Do not use and store in dusty and wet environment.
- Check the unit prior to every use. Do not use the unit if it is damaged, broken.
- Do not use the unit if the power cord is damaged or broken.
- Keep the unit away from children. Do NOT let children use the power supply unit.
- Keep this product away from pets.

- DO NOT use or store the unit in an area or environment with high temperature.
- Should fluid from inside of the unit come in contact with your skin or clothing, wash the affected areas with tap water.




 




- In a storm, unplug the power cord from the socket.
- DO NOT charge the unit via power supply systems that operate outside of 100-240V.
- DO NOT place the unit on its side or upside down while in use or storage.



**CAUTION**  
Noncompliance may lead to injuries and/or property damage\*\*\*

- If rust, peculiar odors, overheating or other abnormal circumstances are observed, stop using the unit immediately and contact the dealer or our customer service center.
- The unit complies with all legal requirements for transport of dangerous goods.
- Make sure that the unit is properly secured when transporting it in a motor vehicle.
- Only charge, use and store the unit within an ambient temperature of 0 to 40 °C (32 - 104 °F).
- Switch the unit off immediately if it has accidentally fallen, was dropped or was exposed to vibrations.
- Carefully read the instructions for the electric devices that you intend to connect to your power supply unit.
- Make sure that the device you are connecting is switched off before you connect it.

## ATTENTION

	Not permitted on aircrafts
	To preserve the battery lifespan, please use and recharge at least once every 3 months
	Use original or certified charger and cables
	Avoid extreme temperature
	Avoid dropping
	Do not disassemble
	It's not waterproof, do not expose to liquids
	Please dispose of batteries and electronic goods in accordance with local regulations



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

## DISCLAIMER

- Our company cannot be held liable for damages caused by fire, earthquake, use by a third party, other accidents, intentional misconduct on the part of the customer, abuse or other abnormal conditions.
- Do not repair any damage to the AC plug or power supply on your own.
- The warranty covers all terms and conditions of the warranty. Contents that are not specified in the warranty terms and conditions are beyond our responsibility.
- Our company assumes no liability for damages caused by incorrect use or non-compliance with this instruction manual.

**Intended use:** The Jackery Explorer 240 portable power unit is intended as a power supply for electronic devices with a maximum power consumption of 200 W. Our product is not suitable to be used with equipment that relates to one's own personal safety and relies heavily on electricity, such as medical devices, equipment for nuclear facilities, the manufacture of air and spacecraft, etc. We therefore assume no liability for accidents involving personal safety, fires, or machine failures caused by using our product with the aforementioned devices.