

WARRANTY CARD / JAMSTVENI LIST

ITEM/MODEL:

Naziv/model proizvođa:

RECEIPT NO. / DATE OF PURCHASE:

Broj i datum računa:

SELLING SPOT (COMPANY):

Prodajno mjesto:

THE CUSTOMER:

Kupac:

WARRANTY PERIOD

(MONTHS):

Jamstveni rok

(Mjeseci):

24

SIGNATURE / STAMP:

Potpis i pečat:

All White Shark products are examined and tested after each stage of the production process and have all the required certificates (EMC, CE...). The products are subject to the following warranty conditions: • The warranty period for White Shark products is 24 months (on batteries 6 months) and begins on the day of being sold in the store • The warranty can only be claimed upon presentation of the original purchase invoice and a filed warranty paper with a stamp from the store it was bought at, and if the product has original packaging and all components and equipment • All malfunctioning of the product resulting from factory defects, that occur during the warranty period, and in the normal use of the product in compliance with all instructions will be removed. This warranty covers only defects in material and production. • If the product malfunctions during the warranty period, your White Shark distributor will give you the product (after which is checked by a professional) repaired or replaced • If the repair at the authorized service center is not completed within 30 days of being received at the service center, we will replace the product with a new one. If the repair during the warranty period lasts longer than 15 days, the warranty period is extended by as many days as the repair lasted. • If the device needs to be repaired within the warranty period, contact the store where you bought the product. If the product has to be sent to an authorized service center or general distributor, please send the product (with all parts and accessories) in the original packaging and with all the necessary documents (invoice, warranty card, etc.). The product can be repaired only in the authorized service center of the importer. The costs of shipping the product to the service center are funded by the customer. Possible damage to the product that can occur during transport is at the expense and risk of the buyer. Sending the product from the service center to the customer is funded by the service technician/the importer. This warranty does NOT cover: • Damage or malfunctions that would occur as a result of incorrect connection, incorrect polarization, incorrect battery placement, etc. • Defects caused by improper handling of products, use of parts or equipment that is not prescribed by our specifications, unauthorized product modification, and defects mechanical damage to the product • Defects that can occur due to product fall, use of force, natural disasters (flood, fire, thunder, earthquake...), due to battery leakage, due to unstable 220V voltage, frequent variations and/or power outages, etc. • Damage caused during transport to the customer • Products that have been opened or repaired by an unauthorized person • Parts that are considered consumables such as batteries, etc.

Svi White Shark proizvodi su provjereni i testirani nakon svake faze proizvodnog procesa te imaju sve potrebne certifikate (EMC, CE...) te podliježu sljedećim jamstvenim uvjetima: • Jamstveni rok na White Shark proizvode je 24 mjeseca (na baterije 6 mj.) i počinje teći danom prodaje u trgovini • Jamstvo se može ostvariti samo uz predočenje originalnog računa o kupnji i uredno popunjenog jamstvenog lista sa žigom trgovine, te ako proizvod ima originalnu ambalažu i sve sastavne dijelove i opremu. • Svi nedostaci i kvarovi koji su posljedica tvorničkih grešaka i koji su nastali u jamstvenom roku i pri normalnoj uporabi proizvoda i pri poštivanju svih naputaka će biti otklonjeni. Ovo jamstvo obuhvaća samo greške nastale u materijalu i izradi. • Ako se proizvod pokvari tijekom jamstvenog roka, Vaš White Shark distributer će Vam proizvod popraviti ili zamijeniti nakon što ga provjeri stručna osoba • Ako popravak u ovlaštenom servisu nije izvršen u roku 30 dana od primitka u servis, proizvod ćemo zamijeniti novim. U slučaju da popravak u jamstvenom roku traje duže od 15 dana, jamstveni rok se produžuje za onoliko dana koliko je popravak trajao. • Ako se ukaže potreba popravka uređaja u jamstvenom roku, kontaktirajte trgovinu u kojoj ste proizvod i kupili. Ako proizvod treba poslati ovlaštenom servisu ili generalnom distributeru, molimo Vas da kompletan proizvod (sa svim dijelovima i opremom) bude zapakiran u originalnu ambalažu te da priložite sve potrebne dokumente (račun i ovjereni jamstveni list). Popravak aparata vrši se isključivo u ovlaštenom servisu uvoznika. Troškove prijevoza proizvoda na servis snosi kupac. Kupac preuzima rizik za moguća oštećenja tijekom prijevoza. Slanje proizvoda od servisa do kupca snosi serviser tj. uvoznik. Ovo jamstvo NE obuhvaća: • Oštećenja ili kvarove koji su nastali kao posljedica nepravilnog priključivanja, krive polarizacije, pogrešnog stavljanja baterija i sl. • Kvarove nastale zbog nepropisanog rukovanja proizvodom, korištenja dijelova ili opreme koja nije propisana našim specifikacijama, neovlaštenog modifikiranja proizvoda te kvarove nastale mehaničkim oštećenjem proizvoda • Kvarove koji mogu nastati uslijed pada proizvoda, uporabe sile, više sile tj. elementarnih nepogoda (poplava, požar, grom, potres...), uslijed curenja baterije, uslijed nestabilnog 220V napona, čestih varijacija i/ili nestanaka struje i sl. • Oštećenja nastala pri prijevozu do kupca • Proizvod koji je otvoren i/ili popravljn od strane neovlaštene osobe • Dijelove koji se smatraju potrošnicima kao što su baterije i sl.



WHITE  SHARK



GBT-58

TAMMA

BLUETOOTH SPEAKER

USER MANUAL

Introduction

Thank you for choosing our wireless audio player. Before using GBT-58 TAMMA, please read through the manual that guides you on how to operate it correctly & quickly. It is filled with reference information that will allow you to make the fullest use of the product. We appreciate your kind understanding if there is any misprint or translation error.

Function Introduction


- Wireless audio: Stereo sound with MAX 10m liner receiving range
- Wireless communication: Provide clear sound by using high fidelity wireless chip, no echo or tiny voice occurred
- TF function: Power-off memory and loop playback function
- USB function: Power-off memory and loop playback function
- Aux-in: Easy to connect with laptop, mobile phone and other devices with a 3.5mm audio cable
- TWS (true wireless) function: Player A and player B could play the same music source by wireless connecting
- FM radio

In the box:

- 1x audio player
- 1x Micro USB charging cable
- 1x 3.5mm audio cable
- 1x User manual

Controls & Functions:

1. Power/Mode button
2. Wireless shortcut/TWS button
3. Previous song/volume down
4. Play/Pause/phone answering/hang up/ call reject/FM searching
5. Next song/volume up
6. Hands-free MIC
7. Charging port
8. AUX-IN port (reset switch inside)
9. TF card slot
10. USB port
11. Working status indicator light/charging indicator light
12. TWS pairing indicator light

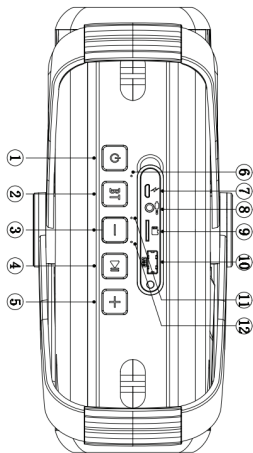

Power on & power off operating instruction

Power on: Press the power button for 2 seconds until the blue indicator light is displayed, and then the speaker will be in pairing mode after the voice prompt.

Power off: Just press the power button for 2 seconds no matter which mode the speaker is staying in, it will power off after the voice prompt.

Automatic shut-down at low voltage: Please charge the speaker as soon as possible if the product does not work normally or powers off at low voltage.

Wireless function introduction: The blue indicator light blinks when the speaker powers on. Search for the wireless pairing name "GBT-58 TAMMA" on your cell phone. After clicking on "GBT-58 TAMMA" it will automatically connect after you hear the voice prompt. If necessary, the password is "0000". The speaker can automatically connect to the last device you ever connected.

Wireless shortcuts /disconnection button: It will jump into wireless mode after a short press of the wireless shortcuts; disconnecting and searching another wireless device after 2 seconds pressing.

Buttons function under wireless mode: short press “—” button for volume down, long press “—” button for the previous song. Short press the “+” button for volume up, long-press the “+” button for the next song. Short press the “▶||” button for the pause or play function. Short press “▶||” button to answer the call or hang up, long press “▶||” button to reject a call; U could control the volume with your fingers pressed on the volume button.

Wireless communication function:

You could answer the phone by pressing the corresponding buttons when there is an incoming call. The best calling effect is within 1m from the speaker. You can adjust the volume according to your requirement.

TF card function introduction:

TF card playing function: Switching to TF card playing mode by pressing the mode button or put the TF card into the card slot.

Buttons function under TF card mode: short press “—” button for volume down, long press “—” button for the previous song. short press “+” button for volume up, long press “+” button for next song. Short press “▶||” button for pause or play function.

USB function introduction:

USB function: Switching to USB mode by pressing the mode button or put the USB disk into the USB port directly.

Buttons function under USB mode: short press “—” button for volume down, long press “—” button for previous song. short press “+” button for volume up, long press “+” button for next song. Short press “▶||” button for pause or play function.

AUX-IN function introduction:

AUX-IN mode function introduction: Switching to AUX-IN mode by connecting with an audio cable. If you have already put the audio cable in the speaker before power on, just press the MODE button to select AUX IN mode.

Buttons function under AUX-IN mode: Short press “▶||” button for a pause or play function. Short press “—” button for volume down and short press “+” button for volume up.

FM function introduction:

FM mode: Switching to FM mode by pressing mode button.

Buttons function under FM mode: Short press “▶||” button for a pause or play function, long press “▶||” buttons for 2 seconds, then the speaker will automatically be searching and memorizing FM stations. Short press “—” button for volume down and short press “+” button for volume up. Long press “—” button or “+” button for FM stations selection.

TWS (True wireless) function:

Attention: Please make sure that both speakers do NOT connect with any mobile device before doing the TWS operation.

Suppose A is host player, B is slave player, power on A and B one by one, Double click the TWS (BT) button of A. You will find the white light of TWS button blinks. After 5-10 seconds the white light keeps long bright when B is connected with A successfully. Then search the Bluetooth pairing name “GBT-58 TAMMA” on your cell phone and click “GBT-58 TAMMA”. “A” could play music once paired successfully, B will play the

same music at the same time. You could control the volume, song selection, pause, play, power off by pressing the buttons of either audio player during music playing. A double click TWS (BT) button means turn off this function after the 2 speakers are connected together. TWS function ONLY could operate under Bluetooth mode, NO other modes.

Charging function introduction:

The speakers will not normally work when the battery is low, please charge it with the included micro USB cable. The RED indicator light will blink during charging and the light will turn off when the speaker is fully charged.

Indicator lights function introduction:

Working status indicator light: The blue light blinks slowly during playing, fast blinking when searching, and keeps long bright when suspending.

TWS indicator light: The white light fast blinking during searching, keeps long bright after successfully paired, and turns off after 2 speakers are disconnected.

Reset Switch: It is hiding in the line-in hole. If the speaker is dead and can't power off because of the consumer's improper operation, just use a slim metal wire or a toothpick to press the reset switch, and then the speaker will function normally again.

Technical Parameters:

- Output power: 2 x 6W
- Working voltage: DC 3.7V
- Built-in battery: 3.7 V / 3000 mAh.
- Frequency: 60 Hz-18 kHz
- Bluetooth version: 5.0
- BT operating range: 10 m (no obstacle distance)
- SNR: >70 dB
- Distortion: <10%
- Support MP3: bite rate, 32 kbps - 320 kbps

CAUTIONS!

Operation is subject to the following conditions and safety instructions to guarantee safe and reliable use of the product.

It is not allowed to make the product fall or suffer from the fall.

- It is not allowed to keep the product close to the high magnetic field.
- It is not allowed to keep the product close to a high-temperature heat source, nor dry or blow the product at a high temperature.
- It is not allowed to disassemble, repair or remake the product.
- Do not listen to music at a high volume for a long time as of a bad effect on hearing.
- It is not allowed to use clean water to clean the speaker, a slightly wet cleaning cloth is adequate.
- Please charge on time and unplug the charging cable when fully charged to extend the battery lifetime.
- Please handle properly the waste packaging, battery, and waste electronics with the appropriate classification.