

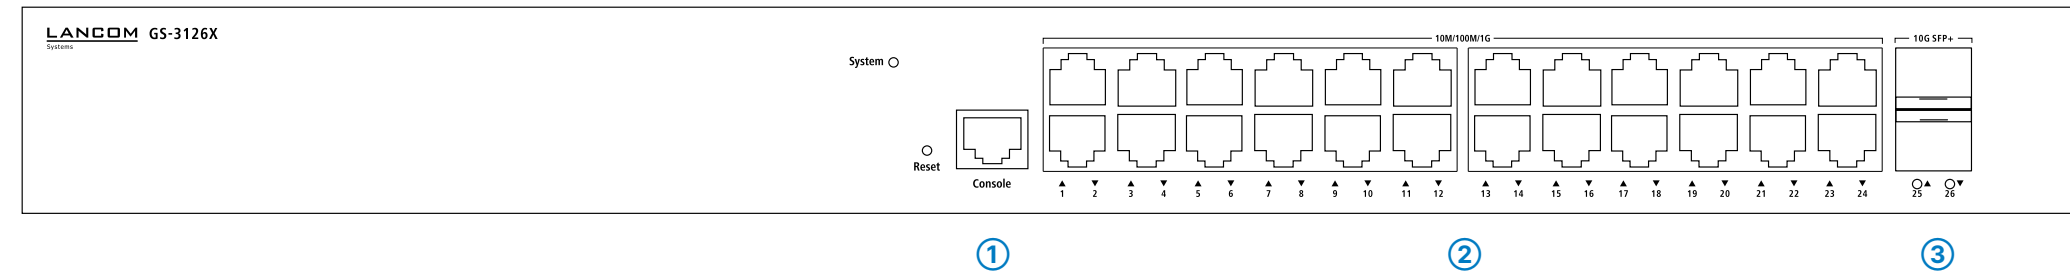



# Hardware Quick Reference LANCOM GS-3126X

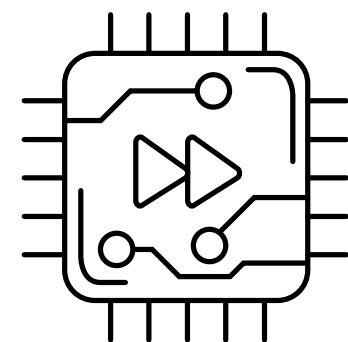

- 1 Configuration interface (Console)**  
Connect the configuration interface via the included serial configuration cable to the serial interface of the device you want to use for configuring / monitoring the switch.
- 2 TP Ethernet interfaces**  
Use Ethernet cables to connect the interfaces 1 to 24 to your PC or a LAN switch.

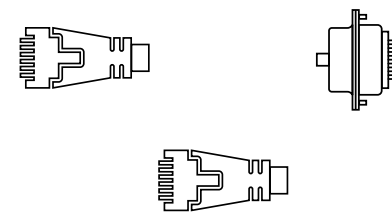

- 3 SFP+ interfaces**  
Insert suitable LANCOM SFP modules into the SFP+ interfaces 25 to 26. Choose cables which are compatible with the SFP modules and connect them as described in the module's documentation.
- 4 Power connector (device back side)**  
Supply power to the device via the power connector. Please use the IEC power cable supplied or a country-specific LANCOM Power Cord.
- 5 ATTENTION:** High touch current possible! Connect to earth before connecting the power supply.

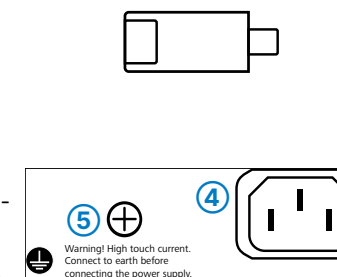

**Before initial startup, please make sure to take notice of the information regarding the intended use in the enclosed installation guide!**


**Operate the device only with a professionally installed power supply at a nearby power socket that is freely accessible at all times.**

**The mains plug of the device must be freely accessible.**



**Please observe the following when setting up the device**

- For devices to be operated on the desktop, please attach the adhesive rubber footpads
- Do not rest any objects on top of the device or stack multiple devices
- Keep all ventilation slots of the device clear of obstruction
- Mount the device into a 19" unit in a server cabinet using the provided screws and mounting brackets.
- Please note that support service for third-party accessories is excluded.

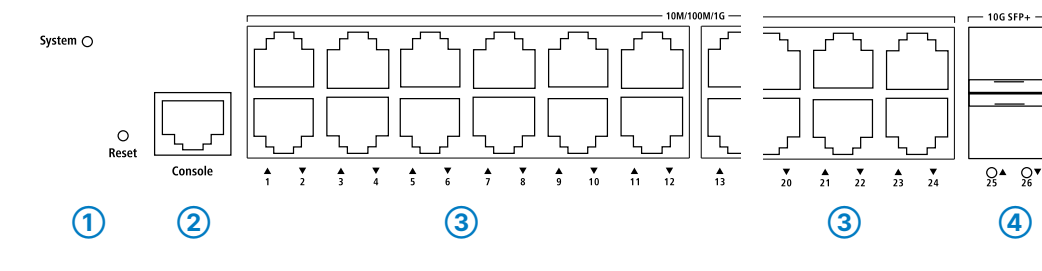

1 System LED		3 TP Ethernet ports	
Off	Device powered off	Off	Port inactive or disabled
Green	Device operational	Green	Link 1000 Mbps
Red	Hardware error	Green, blinking	Data transfer, link 1000 Mbps
<b>2 Reset button</b>		Orange	Link ≤ 100 Mbps
Pressed until all port LEDs are off	Device restart	Orange, blinking	Data transfer, link ≤ 100 Mbps
Pressed until all port LEDs glow permanently	Configuration reset and device restart	4 10 G SFP+ ports	
		Off	Port inactive or disabled
		Blue	Link 10 Gbps
		Blue, blinking	Data transfer, link 10 Gbps
		Green	Link 1 Gbps
		Green, blinking	Data transfer, link 1 Gbps

## Mounting & connecting

This product contains separate open-source software components which are subject to their own licenses, in particular the General Public License (GPL). The license information for the device firmware (LCOS) is available on the device's WEBconfig interface under "Extras > License information". If the respective license demands, the source files for the corresponding software components will be made available on a download server upon request.

Hereby, LANCOM Systems GmbH | Adenauerstrasse 20/B2 | D-52146 Wuersele, declares that this device is in compliance with Directives 2014/30/EU, 2014/35/EU, 2011/65/EU, and Regulation (EC) No. 1907/2006. The full text of the EU Declaration of Conformity is available at the following Internet address: [www.lancom-systems.com/doc](http://www.lancom-systems.com/doc)

Hardware	
Power supply	Internal power supply unit (100–240 V, 50–60 Hz, 1 A max.)
Power consumption	Max. 30 W
Environment	Temperature range 0–40° C; humidity 10–90 %, non-condensing
Housing	Robust metal housing, 1 HU with removable mounting brackets for 19" installation, 442 x 44 x 211 mm (W x H x D)
Number of fans	1
Interfaces	
ETH	24 TP Ethernet ports 10 / 100 / 1000 Mbps
SFP+	2 SFP+ ports / 10 Gbps 26 concurrent ports in total
Package Content	
Mounting brackets	Two 19" brackets for rack mounting
Cable	IEC power cord 230 V, serial configuration cable 1.5 m