


1. Overview

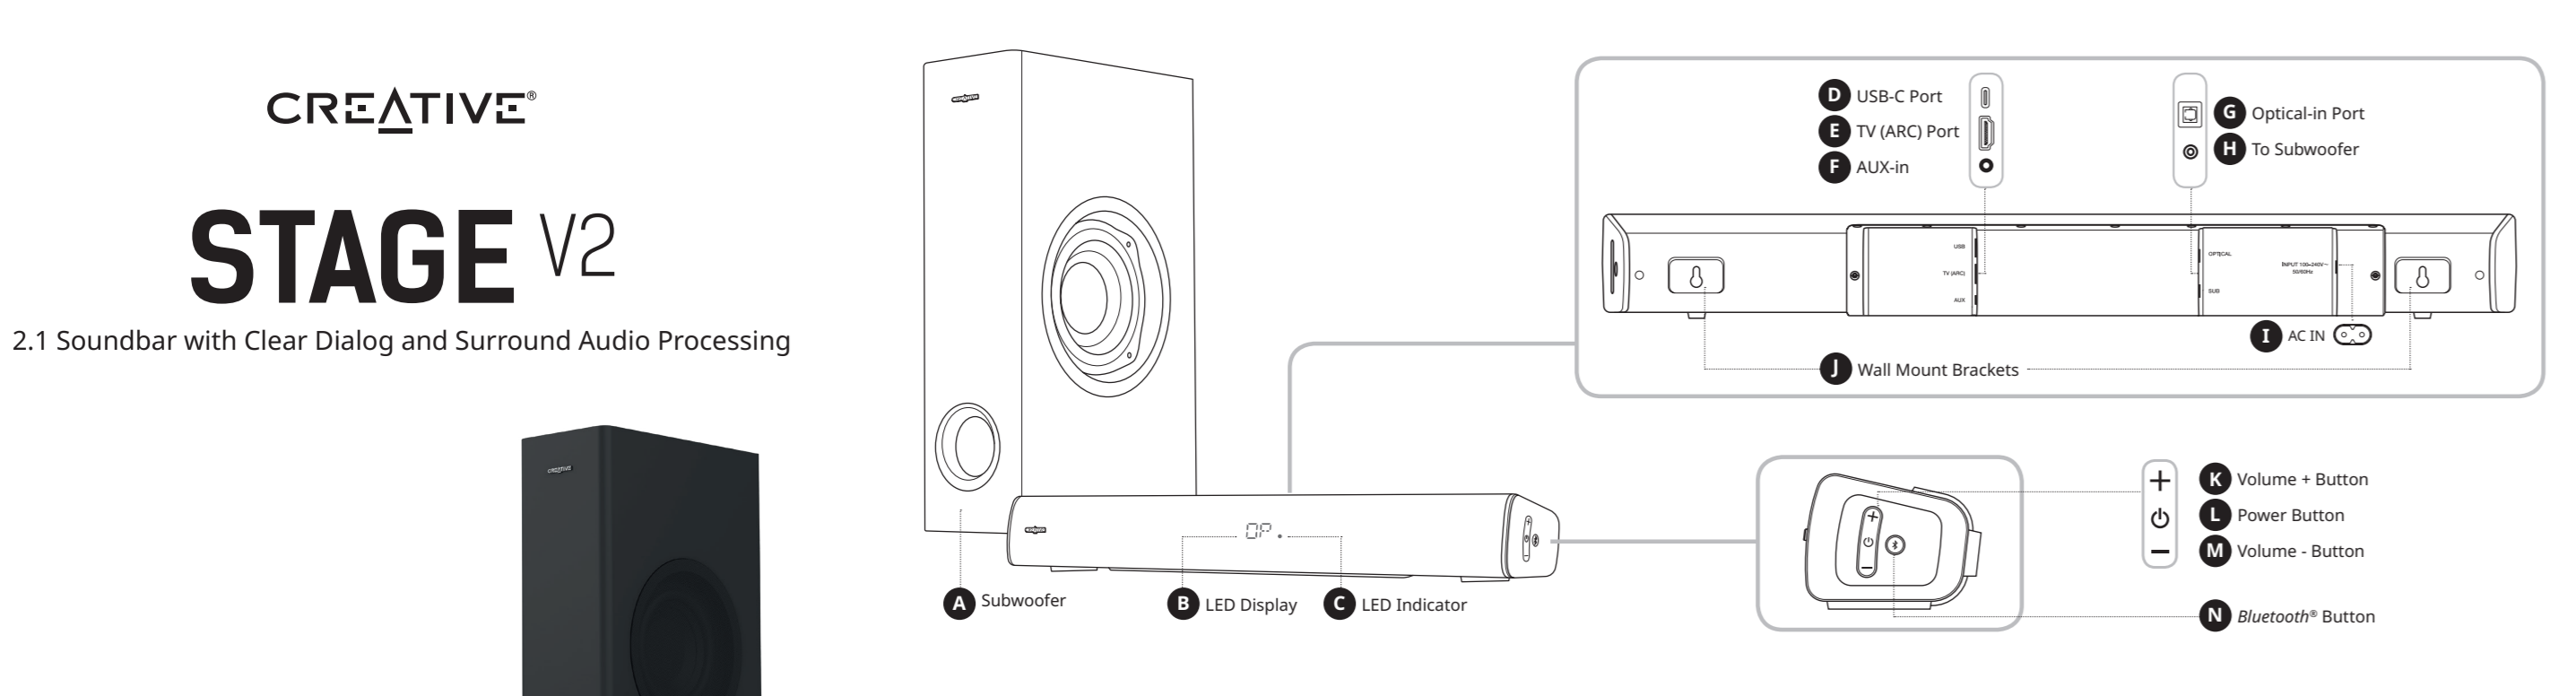

2. IR Remote Control



Quick Start Guide

使用产品前请阅读使用说明
Model No. / 型号 / 型号: MF8375

PN:03MF83750000 Rev C

REGISTER YOUR PRODUCT
TECHNICAL SUPPORT

1. Overview

A. Subwoofer **B.** LED Anzeige **C.** LED-Indikator **D.** USB-Anschluss **E.** Netzschalter **F.** AUX-In **G.** Optischer Eingang

H. Zum Subwoofer **I.** AC IN **J.** Wandhalterungen **K.** Lautstärke + Taste **L.** Netzschalter **M.** Lautstärketaste **N.** Bluetooth-Taste

2. IR-Fernbedienung

a. Einmal drücken, um die Lautstärke auszuschnitten **b.** Drücken Sie erneut, um die Stummuschaltung der Lautstärke aufzuheben **c.** Drücken Sie einmal, um zur Quelle für TV (ARC) auszuschnitten **d.** Drücken Sie erneut, um zur AUX-Out-Quelle umzuschalten **e.** Drücken Sie einmal, um den Bluetooth-Modus aufzurufen **f.** Drücken Sie erneut, um den Pairing-Modus Bluetooth aufzurufen **g.** Drücken Sie, um die Lautstärke zu erhöhen **h.** Drücken Sie, um die Lautstärke zu verringern **i.** Wiedergabe / Pause-Taste **j.** Drücken Sie, um zum vorherigen Titel zurückzukehren **k.** Drücken Sie, um zum nächsten Titel zu springen **l.** Drücken Sie, um den Surround-Modus auszuschnitten **m.** Drücken Sie erneut, um den Clear Dialog zu deaktivieren **n.** Drücken Sie, um den Weit (Bass) / Höhen zu erhöhen / zu verringern **o.** Drücken Sie, um den Bass / Höhen zu erhöhen / zu verringern **p.** Drücken Sie, um zwischen Bass und Höhen umzuschalten

3. Quellenwahl und -anzeige

Drücken Sie die entsprechenden Tasten auf der mitgelieferten IR-Fernbedienung, um die bevorzugte Audio-Quelle auszuwählen. Alternativ können Sie einmal auf den Netzschalter der Soundbar drücken, um durch die Quellen zu blättern.


Bluetooth > Optisch > TV (ARC) > USB-Audio > AUX

Clear Dialog Ein
Bluetooth-Modus
Optischer Eingang
TV (ARC)-Modus
USB-Audiodomus
Standby

Clear Dialog Ein
Bluetooth-Modus
Optischer Eingang
TV (ARC)-Modus
USB-Audiodomus
Standby

Clear Dialog Ein
Bluetooth-Modus
Optischer Eingang
TV (ARC)-Modus
USB-Audiodomus
Standby

3. Source Selection and Display

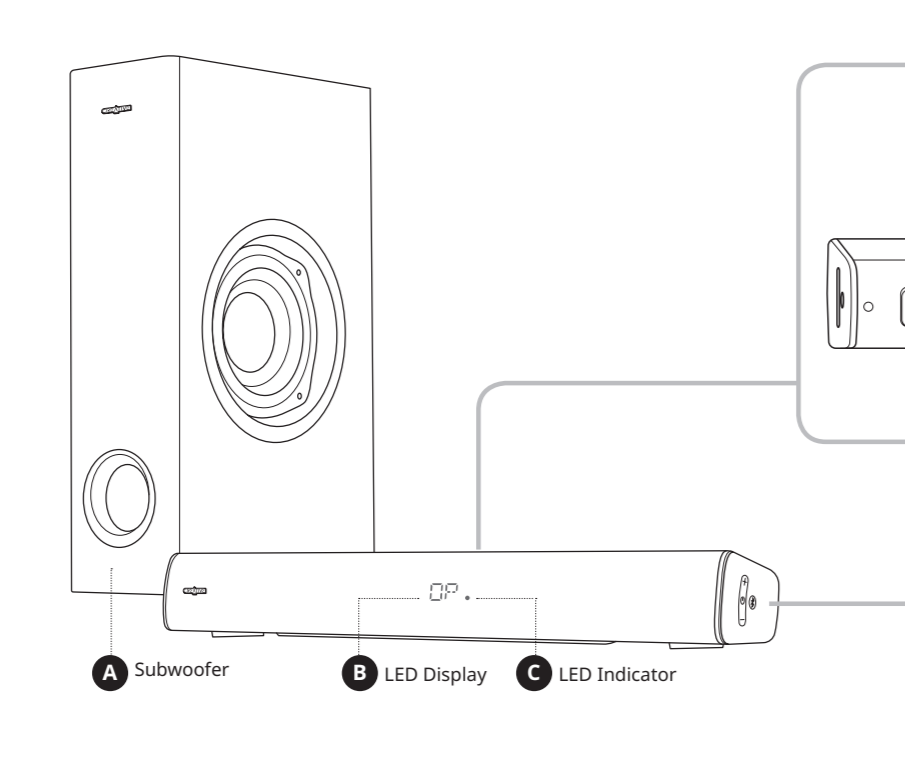

4. Bluetooth Mode / Power-saving Mode


Bluetooth Mode

Press and hold 2s to power off soundbar. Built-in LED will start blinking in blue. Select "Stage V2" from the list of discovered Bluetooth devices to pair. Once paired with a device, soundbar's LED will remain blue in static state.


Power-saving Mode

Creative Stage V2 features a power-saving mode that will power off the soundbar after more than 24 hours of inactivity. To activate / deactivate this feature, press and hold the power button for 10s when the soundbar is powered off.

5. TV (ARC) / Optical / AUX Connectivity

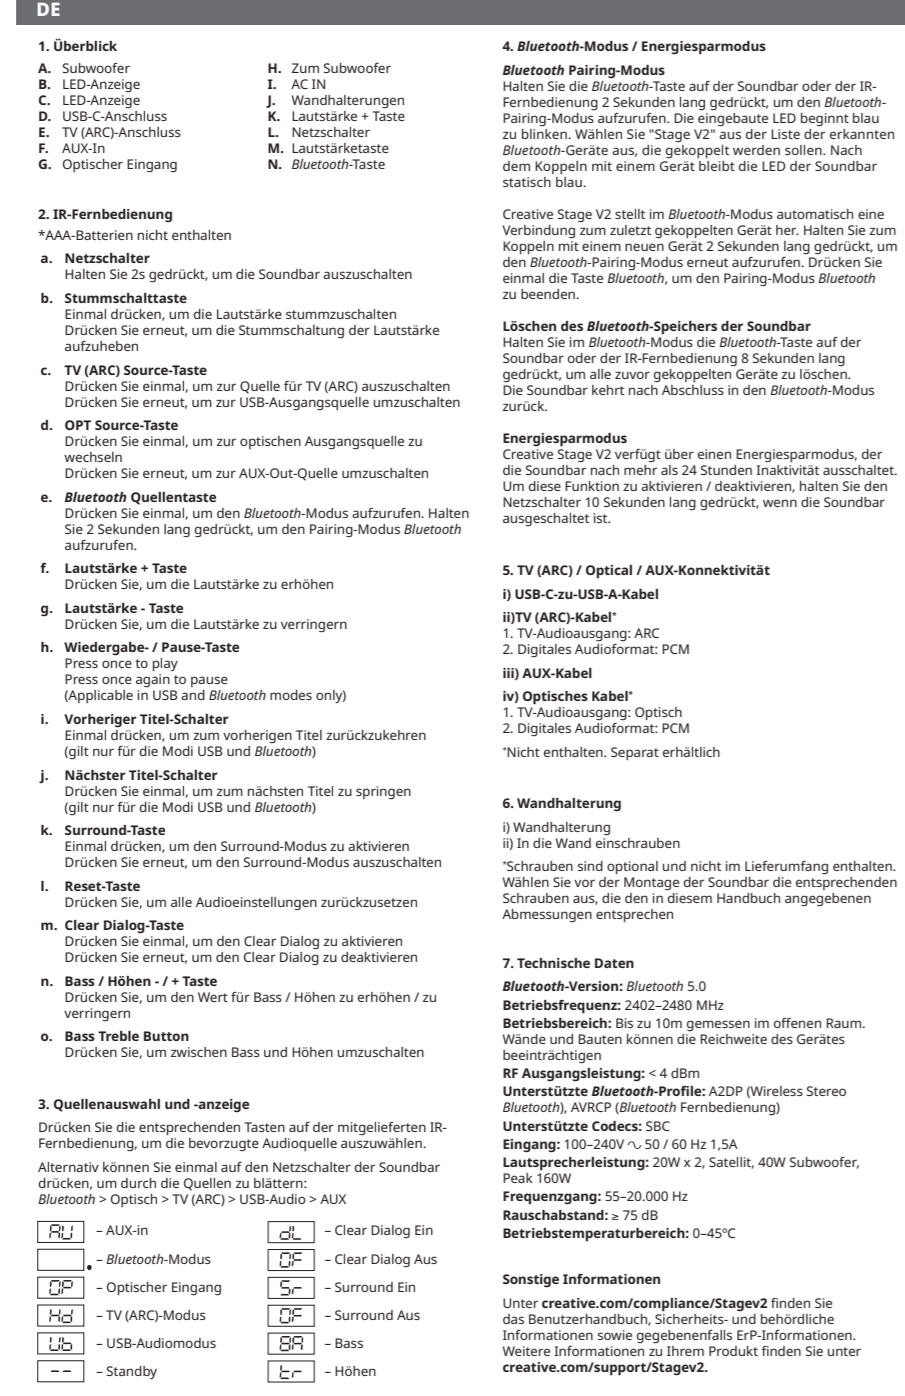

6. Wall Mount

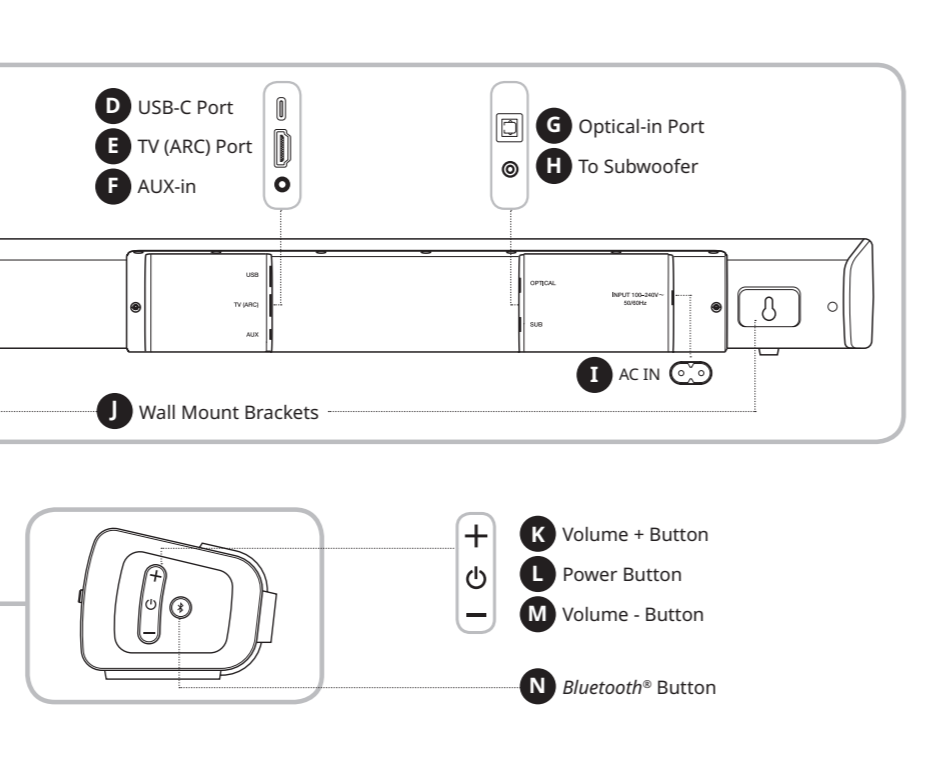

7. Technical Specification

Bluetooth Version: Bluetooth 5.0
Operating Frequency: 2402-2480 MHz
Operating Range: Up to 10m / 33 ft, measured in open space. Walls and structures may affect range of device
RF Output Power: < 4 dBm
Supported Bluetooth Profiles: A2DP (Wireless Stereo Bluetooth), AVRCP (Bluetooth Remote Control)
Supported Codec: SBC
Input: 100-240V ~ 50 / 60 Hz, 1.5A
Speaker Power: 20W x 2, Satellite, 40W Subwoofer, Peak 160W
Frequency Response: 55-20,000 Hz
SNR: > 75 dB
Operating Temperature Range: 0-45°C

Other Information

Please visit creative.com/compliance/Stagev2 for the user guide, safety and regulatory information, and EPR information where applicable.
Please visit creative.com/support/Stagev2 for all other support related to this product.

8. Bluetooth Mode / Power-saving Mode


Bluetooth Mode

Press and hold 2s to power off soundbar. Built-in LED will start blinking in blue. Select "Stage V2" from the list of discovered Bluetooth devices to pair. Once paired with a device, soundbar's LED will remain blue in static state.


Power-saving Mode

Creative Stage V2 features a power-saving mode that will power off the soundbar after more than 24 hours of inactivity. To activate / deactivate this feature, press and hold the power button for 10s when the soundbar is powered off.

9. TV (ARC) / Optical / AUX Connectivity

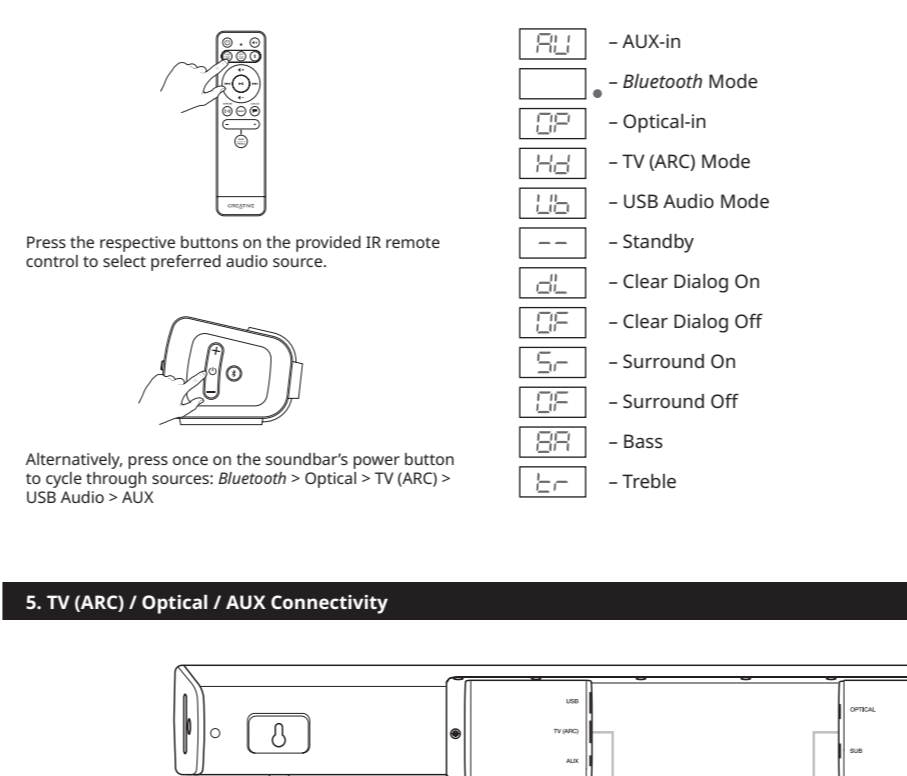

10. Wall Mount

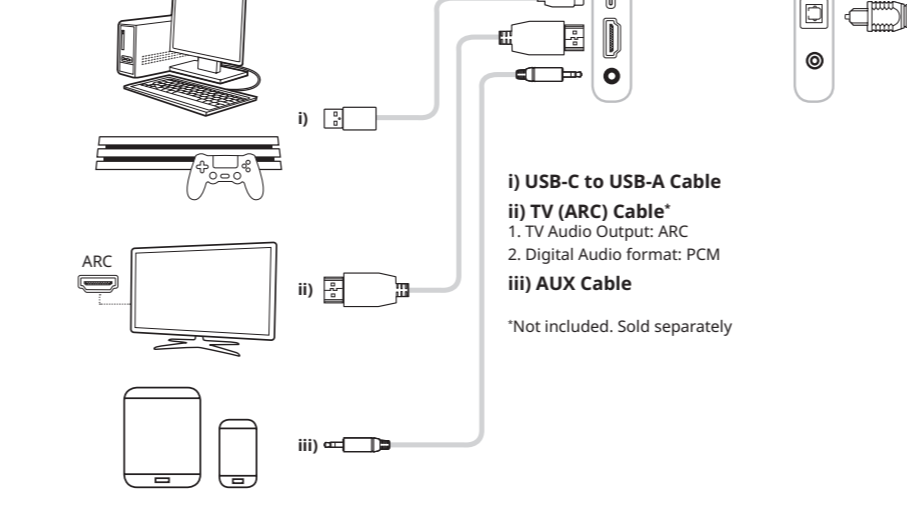


11. Technical Specification

Bluetooth Version: Bluetooth 5.0
Operating Frequency: 2402-2480 MHz
Operating Range: Up to 10m / 33 ft, measured in open space. Walls and structures may affect range of device
RF Output Power: < 4 dBm
Supported Bluetooth Profiles: A2DP (Wireless Stereo Bluetooth), AVRCP (Bluetooth Remote Control)
Supported Codec: SBC
Input: 100-240V ~ 50 / 60 Hz, 1.5A
Speaker Power: 20W x 2, Satellite, 40W Subwoofer, Peak 160W
Frequency Response: 55-20,000 Hz
SNR: > 75 dB
Operating Temperature Range: 0-45°C


Other Information

Please visit creative.com/compliance/Stagev2 for the user guide, safety and regulatory information, and EPR information where applicable.
Please visit creative.com/support/Stagev2 for all other support related to this product.


12. Bluetooth Mode / Power-saving Mode

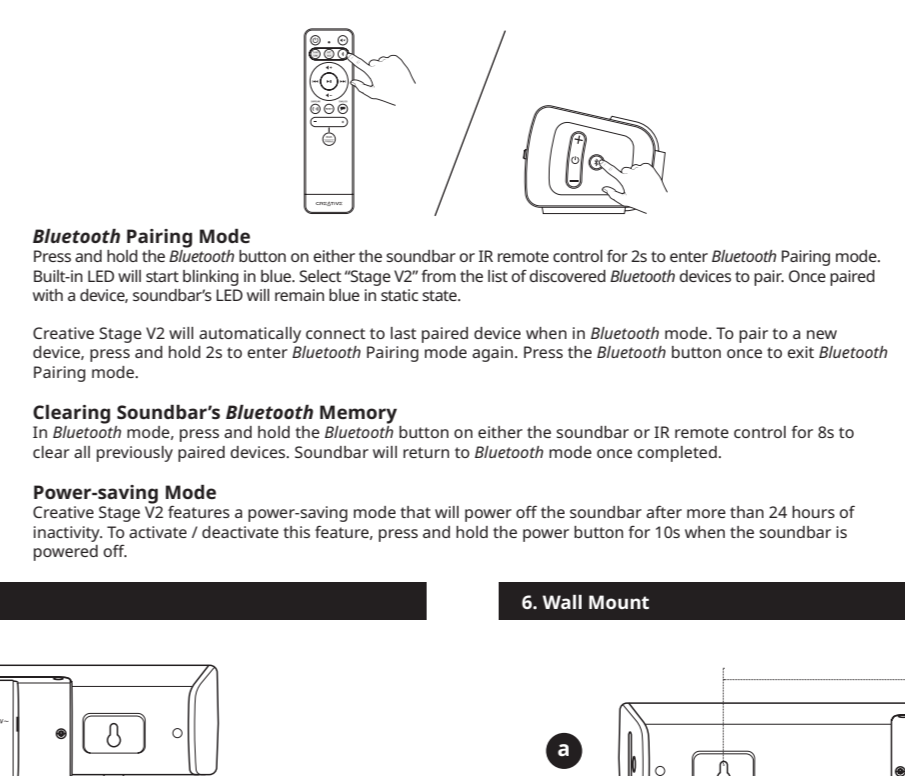

13. TV (ARC) / Optical / AUX Connectivity

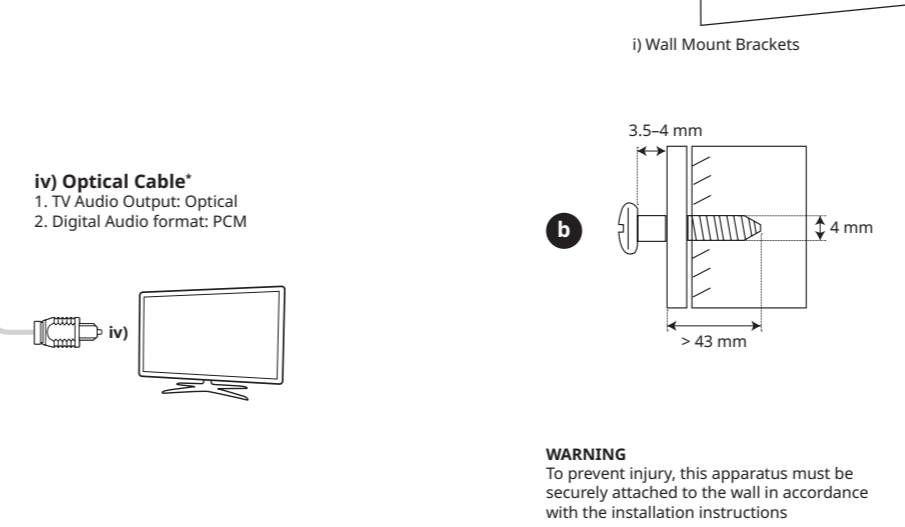

14. Wall Mount

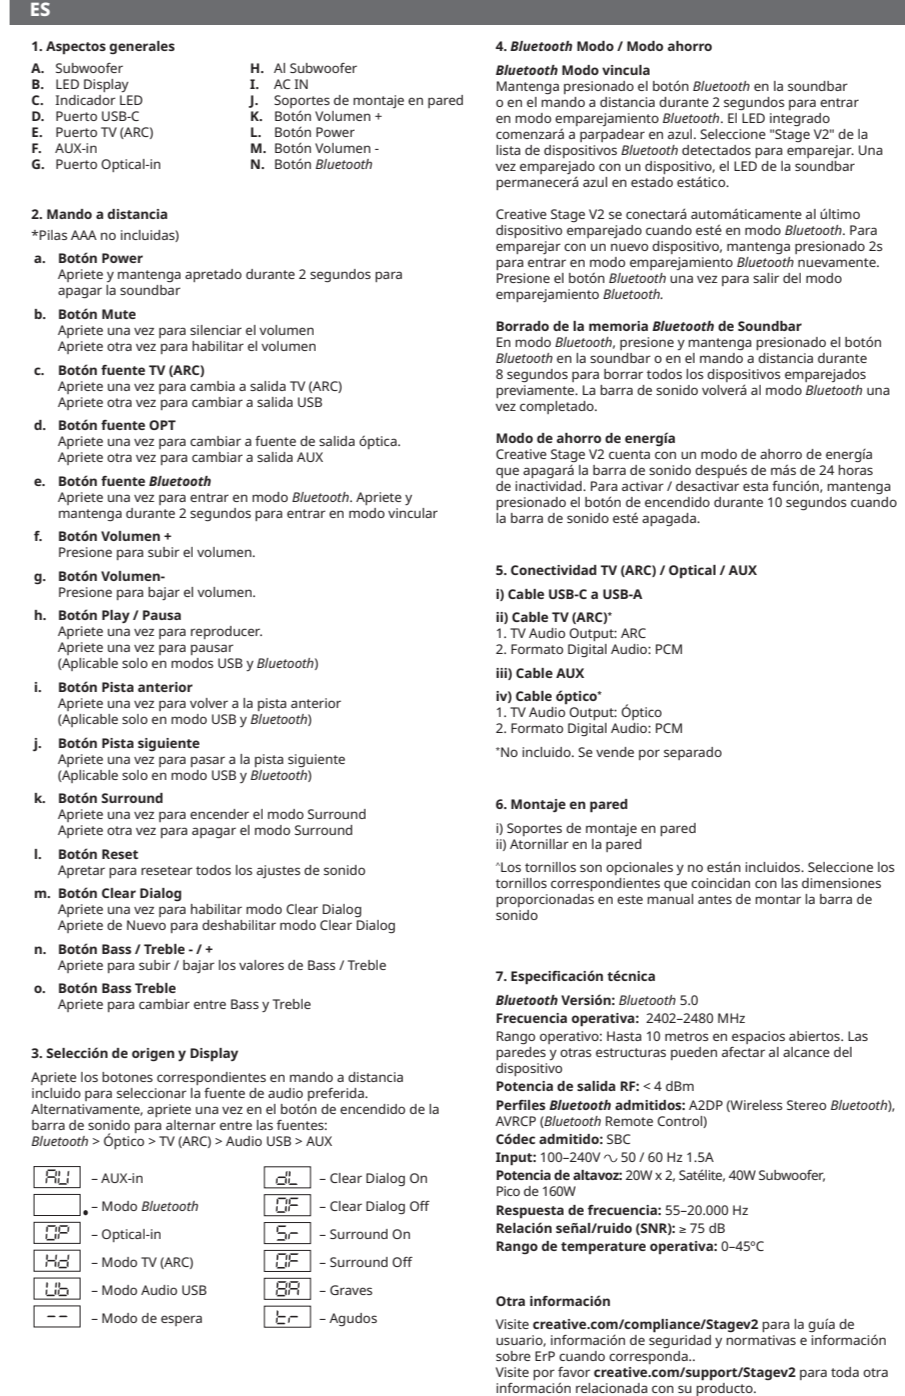

15. Technical Specification

Bluetooth Version: Bluetooth 5.0
Operating Frequency: 2402-2480 MHz
Operating Range: Up to 10m / 33 ft, measured in open space. Walls and structures may affect range of device
RF Output Power: < 4 dBm
Supported Bluetooth Profiles: A2DP (Wireless Stereo Bluetooth), AVRCP (Bluetooth Remote Control)
Supported Codec: SBC
Input: 100-240V ~ 50 / 60 Hz, 1.5A
Speaker Power: 20W x 2, Satellite, 40W Subwoofer, Peak 160W
Frequency Response: 55-20,000 Hz
SNR: > 75 dB
Operating Temperature Range: 0-45°C

Other Information

Please visit creative.com/compliance/Stagev2 for the user guide, safety and regulatory information, and EPR information where applicable.
Please visit creative.com/support/Stagev2 for all other support related to this product.

16. Bluetooth Mode / Power-saving Mode



17. TV (ARC) / Optical / AUX Connectivity



18. Wall Mount



1. Overview

A. Subwoofer **B.** LED Anzeige **C.** LED-Indikator **D.** USB-Anschluss **E.** Netzschalter **F.** AUX-In **G.** Optischer Eingang

H. Zum Subwoofer **I.** AC IN **J.** Wandhalterungen **K.** Lautstärke + Taste **L.** Netzschalter **M.** Lautstärketaste **N.** Bluetooth-Taste

2. IR-Fernbedienung

a. Einmal drücken, um die Lautstärke auszuschnitten **b.** Drücken Sie erneut, um die Stummuschaltung der Lautstärke aufzuheben **c.** Drücken Sie einmal, um zur Quelle für TV (ARC) auszuschnitten **d.** Drücken Sie erneut, um zur AUX-Out-Quelle umzuschalten **e.** Drücken Sie einmal, um den Bluetooth-Modus aufzurufen **f.** Drücken Sie erneut, um den Pairing-Modus Bluetooth aufzurufen **g.** Drücken Sie, um die Lautstärke zu erhöhen **h.** Drücken Sie, um die Lautstärke zu verringern **i.** Wiedergabe / Pause-Taste **j.** Drücken Sie, um zum vorherigen Titel zurückzukehren **k.** Drücken Sie, um zum nächsten Titel zu springen **l.** Drücken Sie, um den Surround-Modus auszuschnitten **m.** Drücken Sie erneut, um den Clear Dialog zu deaktivieren **n.** Drücken Sie, um den Weit (Bass) / Höhen zu erhöhen / zu verringern **o.** Drücken Sie, um zwischen Bass und Höhen umzuschalten

3. Quellenwahl und -anzeige

Drücken Sie die entsprechenden Tasten auf der mitgelieferten IR-Fernbedienung, um die bevorzugte Audio-Quelle auszuwählen. Alternativ können Sie einmal auf den Netzschalter der Soundbar drücken, um durch die Quellen zu blättern.

Bluetooth > Optisch > TV (ARC) > USB-Audio > AUX

Clear Dialog Ein
Bluetooth-Modus
Optischer Eingang
TV (ARC)-Modus
USB-Audiodomus
Standby

Clear Dialog Ein
Bluetooth-Modus
Optischer Eingang
TV (ARC)-Modus
USB-Audiodomus
Standby

Clear Dialog Ein
Bluetooth-Modus
Optischer Eingang
TV (ARC)-Modus
USB-Audiodomus
Standby

